


## Mercedes-Benz

|                         |                    |
|-------------------------|--------------------|
| A-Class W177            | 05/2018 >>         |
| A-Class Limousine V177  | 11/2018 >>         |
| B-Class W247            | 02/2019 >>         |
| CLA Coupé C118          | 04/2019 >> 05/2025 |
| CLA Shooting Brake X118 | 09/2019 >> 05/2025 |
| GLA H247                | 03/2020 >>         |
| GLB X247                | 12/2019 >>         |

Part No: VW-268-07M

## Electric wiring kit for towbars / 7-pin / 12N / 12 Volt / ISO 1724

### Fitting instructions

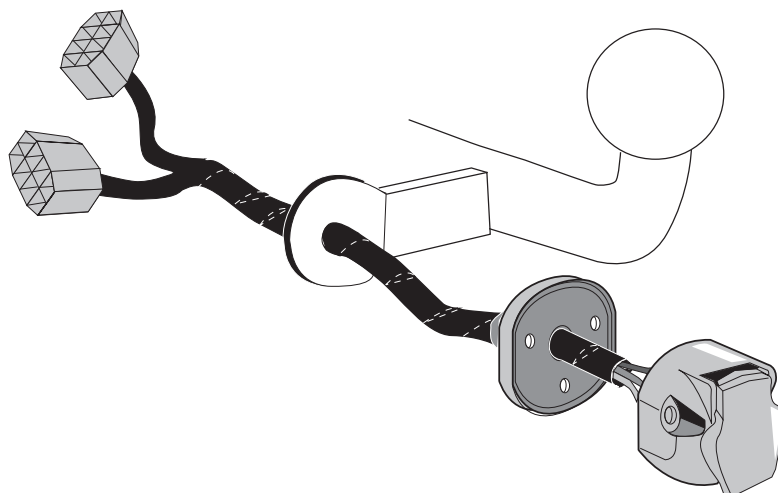

## IMPORTANT!

This electric kit has to be installed by a professional workshop or a suitable qualified person.

The installation instructions must have been read and fully understood before the start of any installation. Please contact your wiring kit provider or the hotline shown in the footer should you need assistance!

Make sure the vehicle is approved/homologated by the manufacturer to tow a trailer!

Also please check that there is a definite compatibility between this vehicle and the electric kit!

Following the installation of the electric kit, the fitting instructions should be kept together with the vehicle service document and vehicle handbook. The fitting instructions contain important information relating to the use and function of the towing kit as well as for any diagnostic or activation process, that might have to be repeated in the future (e.g. after the performance of a vehicle software update).

All warranty claims will be forfeited if the electric kit or components contained therein are used incorrectly or modified. If a towing socket adaptor has been used to connect to the trailer or bike rack, this must be removed from the trailer socket once the trailer or bike rack has been disconnected.

If the trailer or bike rack is not equipped with a rear fog lamp, depending on the towing vehicle type, the correct function of the towing kit cannot be guaranteed. In such cases, a rear fog lamp should be retro fitted.

This towing electric kit will not be covered under warranty if any technical or electrical modifications or software updates have been performed by the vehicle manufacturer after the initial commissioning of the kit. That applies especially to modifications or updates which may cause malfunctions in the trailer socket or any other part of the trailer electrical equipment!

Depending on the type of trailer module used in this electric kit, diagnostic interrogation with the vehicle's electrical system may be limited or will not function. The error memory inside the trailer module may not be able to be accessed by vehicle manufacturers diagnostic system.

Error logs relating to the trailer electrical equipment, that may be generated in the vehicle manufacturers diagnostic system as a result of a test procedure, may be due to the incorrect installation of the towing electric kit or the false activation of the trailer module.

**We always recommend whenever possible, the following troubleshooting process:**

→ **An analysis of the vehicle's error memory and possibly clearing of all faults before the start of the installation!**










→ **Try disconnecting the trailer module from the towing harness and re-start the fault clearing process!**

→ **If in doubt, limit the time for troubleshooting to a max of 0,5 hours and call our Technical Support Team!**

Please follow our instructions carefully and always test the towing electrics using a true lighting board or a specifically designed bulb tester. If an LED tester is used, ensure it is equipped with correct load resistors or malfunctions will occur!

This instruction is subject to changes and we reserve the right to make changes to design, colour etc.

All of the data and illustrations may not be an exact representation but the text contained in this instruction must be observed!

  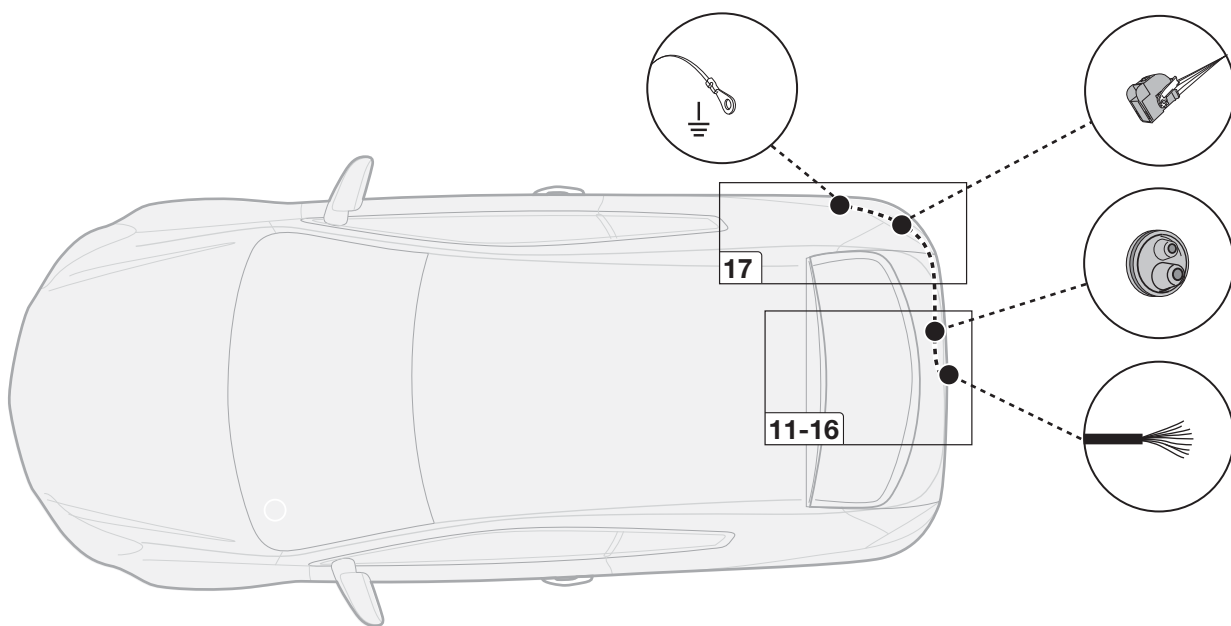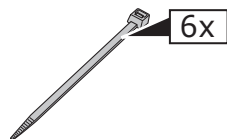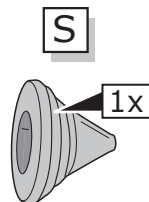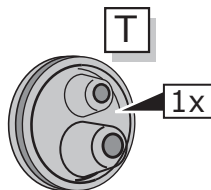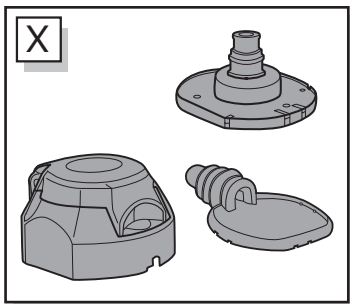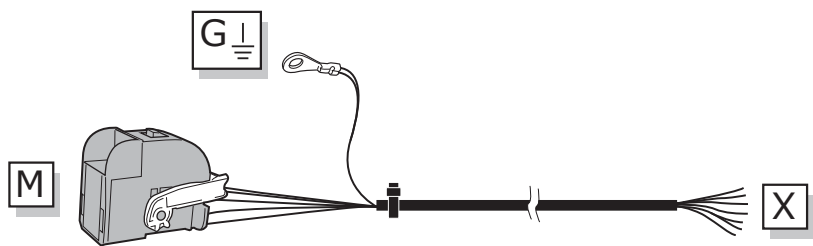 



## SYMBOL EXPLANATION

|            |                                                                |
|------------|----------------------------------------------------------------|
| 58L        | Left taillight (58-L)                                          |
| 58R        | Right taillight (58-R)                                         |
| 54         | Stop light (54) /<br>high mounted, third stop light (54)       |
|            | Turn signal indicator left                                     |
|            | Turn signal indicator right                                    |
|            | Rear fog light(s)                                              |
|            | Reversing lights(s)                                            |
| +30        | Permanent power supply /<br>13pin socket, chamber 9            |
| +15        | Charging wire for trailer battery/<br>13pin socket, chamber 10 |
|            | Trailer /<br>Trailer recognition                               |
| <b>+30</b> | Permanent<br>current power supply                              |
| <b>+15</b> | Voltage after ignition                                         |

|  |                                             |
|--|---------------------------------------------|
|  | Ground or Earth (31)                        |
|  | Ground connection<br>battery terminal lug   |
|  | Positive connection<br>battery terminal lug |
|  | Fuse /<br>fuse capacity 20 Amp              |
|  | Loudspeaker /<br>buzzer                     |
|  | Park distance<br>control                    |
|  | Switch /<br>source of function              |
|  | Connect together                            |
|  | Disconnect                                  |
|  | PDC cut off                                 |
|  | Look carefully<br>at selected area          |
|  | Present /<br>Occupied / OK                  |


|                    |                                           |
|--------------------|-------------------------------------------|
|                    | Not present /<br>Not occupied / not OK    |
|                    | Left                                      |
|                    | Right                                     |
|                    | Acoustic indication                       |
|                    | Attention /<br>important advice           |
|                    | Reusable                                  |
|                    | Trash bin                                 |
|                    | Use tape                                  |
| <b>OPTION</b>      | Option                                    |
| <b>INFO</b>        | Information                               |
|                    | Measure the voltage                       |
| NO<br>NC<br>COMMON | Normally open<br>Normally close<br>Common |

## TOOLS

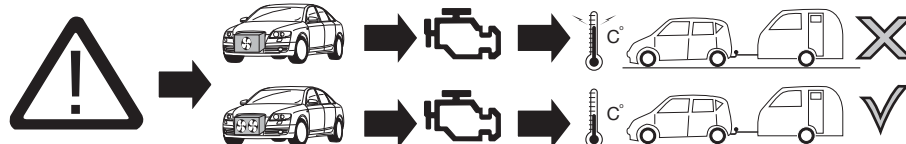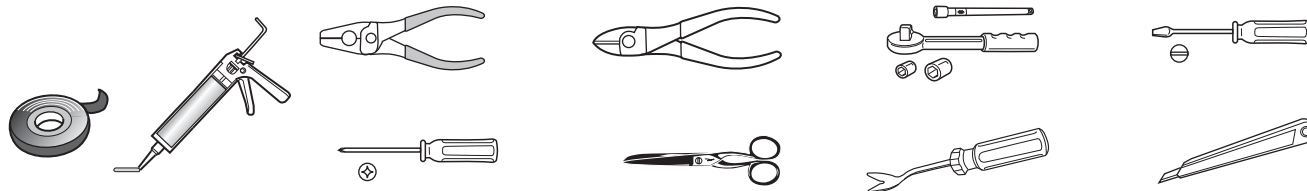

### ATTENTION!

The vehicle's cooling capacity may have to be increased when retrofitting a trailer coupling!  
You must observe the manufacturer's instructions!!

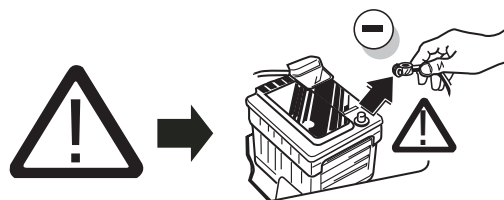

Note: It may be necessary  
to check if this vehicle has  
a stored radio code before  
disconnecting the battery!



### ATTENTION!


In order to avoid mal-functions and damage to the vehicle's electrical system the earth terminal **must be disconnected** from the vehicle's battery **before starting work!**

Both the trailer module and the vehicle's control unit for the electrical system can be damaged during work  
on the data bus connections if the battery is not disconnected!


Please pay attention to the manufacturer's instructions when disconnecting and reconnecting the vehicle's battery!

1


## A-Class & CLA Shooting Brake

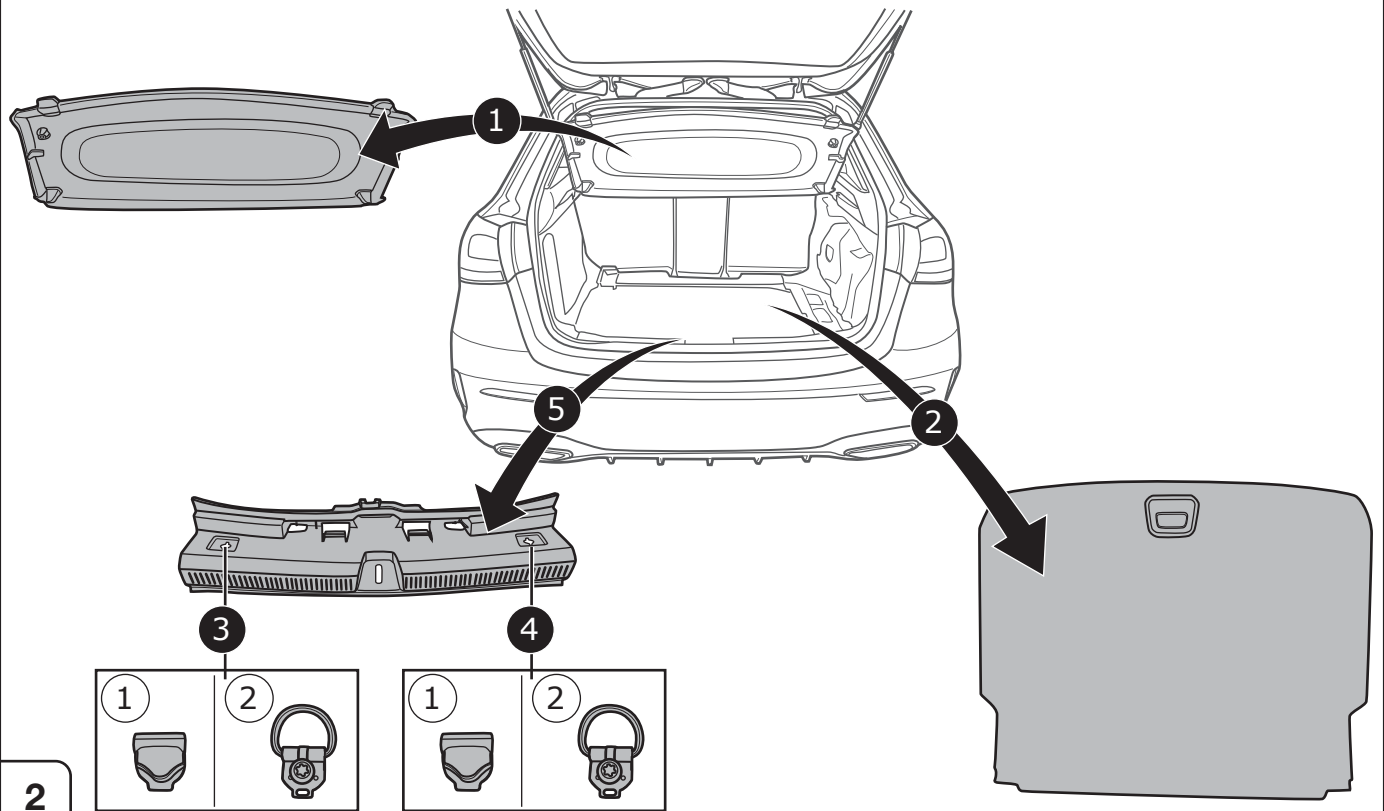

## A-Class & CLA Shooting Brake

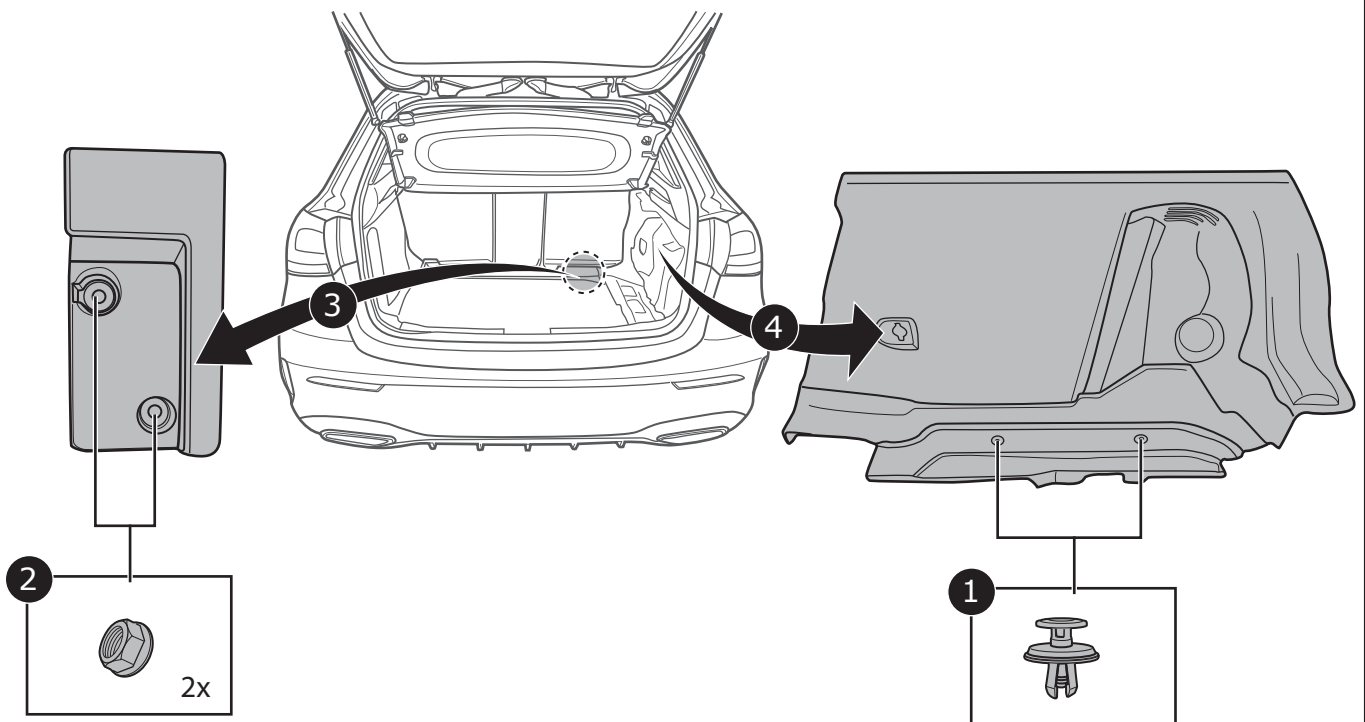


## A-Class Limousine & CLA Coupé

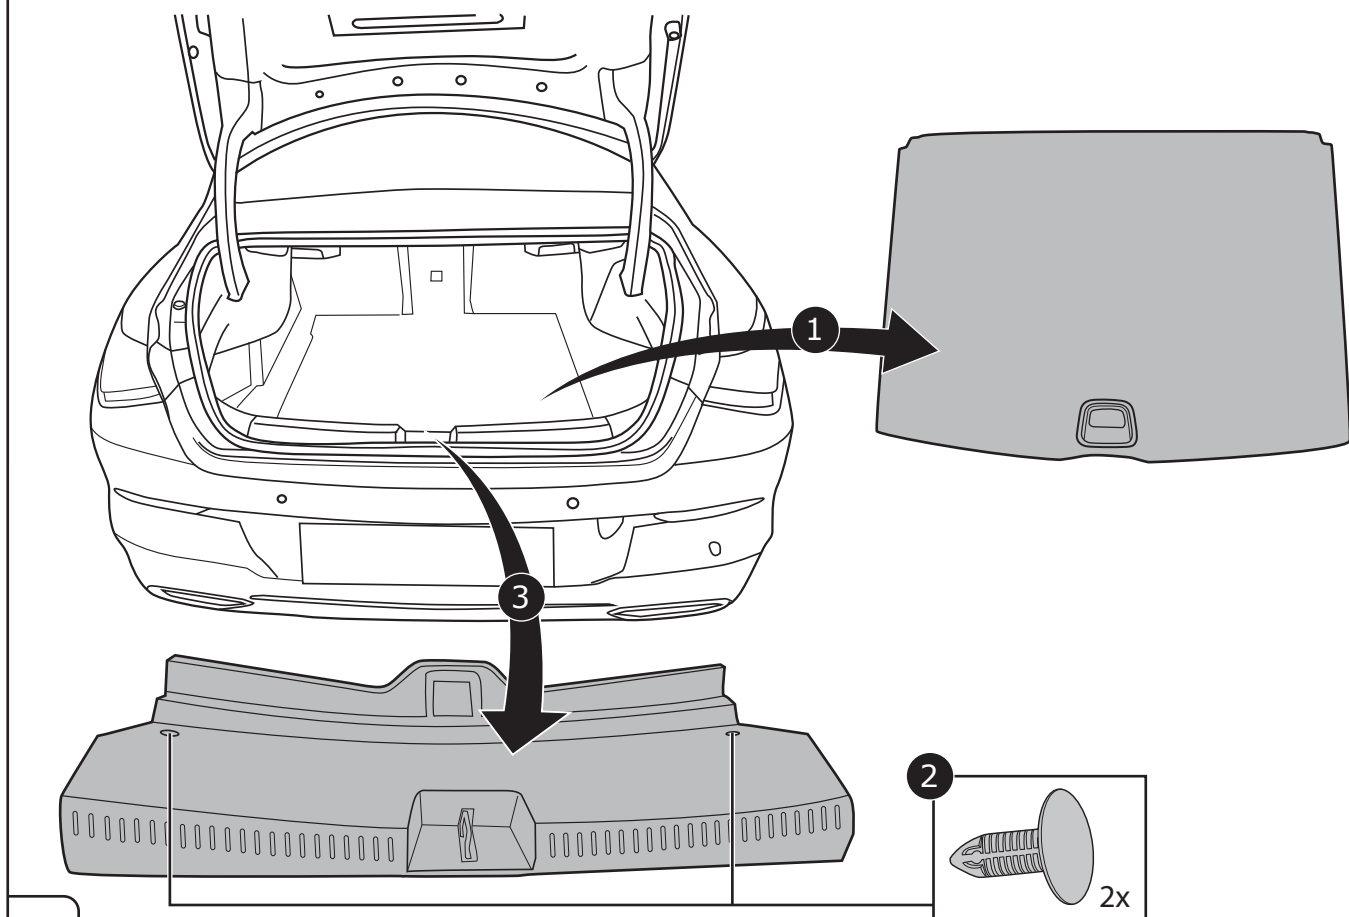


4

## A-Class Limousine & CLA Coupé

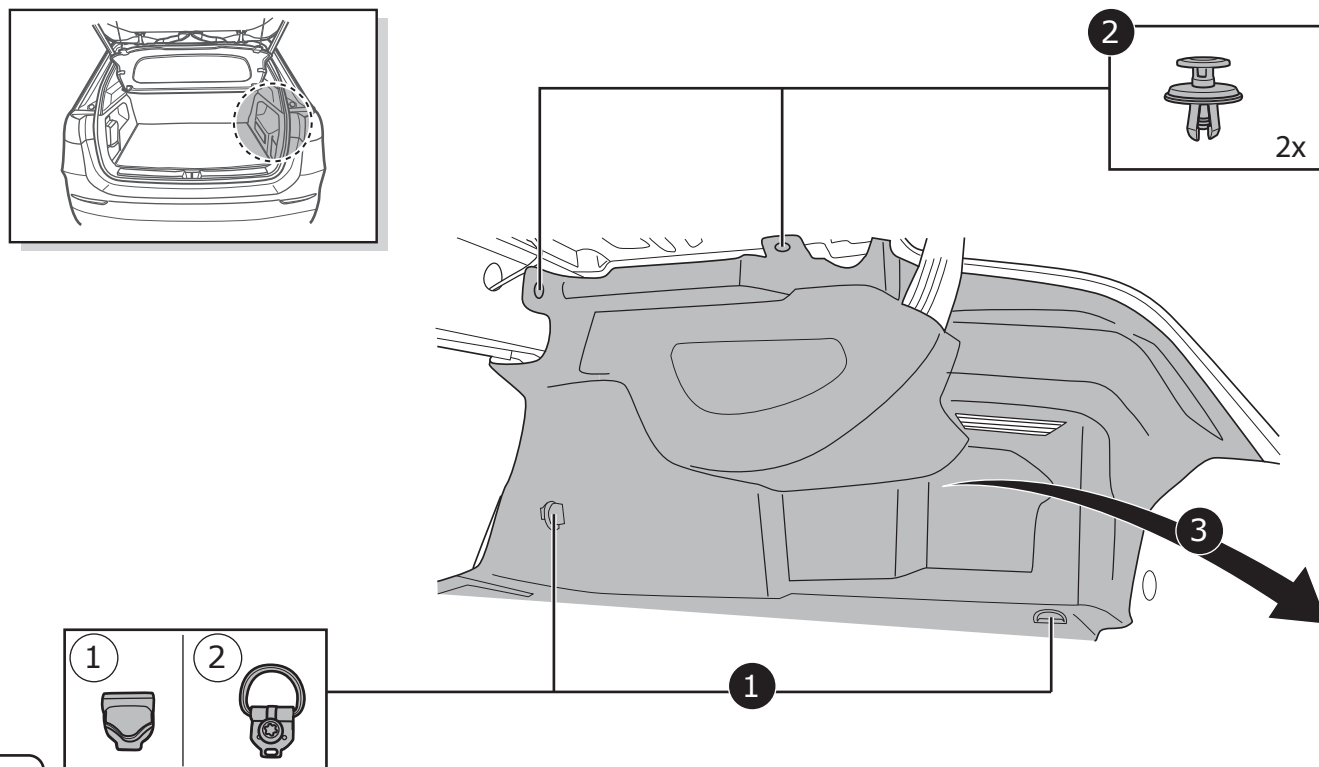


5

## B-Class, GLA & GLB

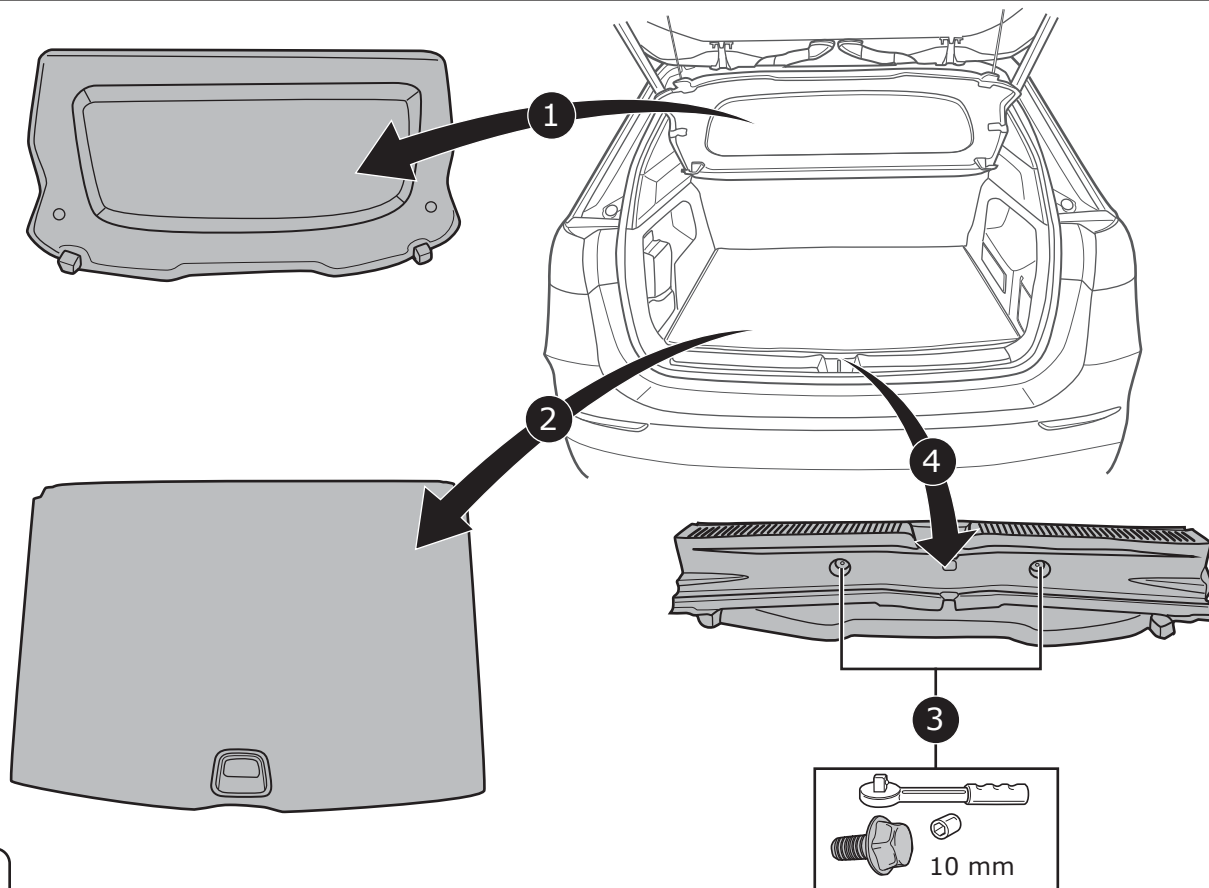






6

## B-Class, GLA & GLB

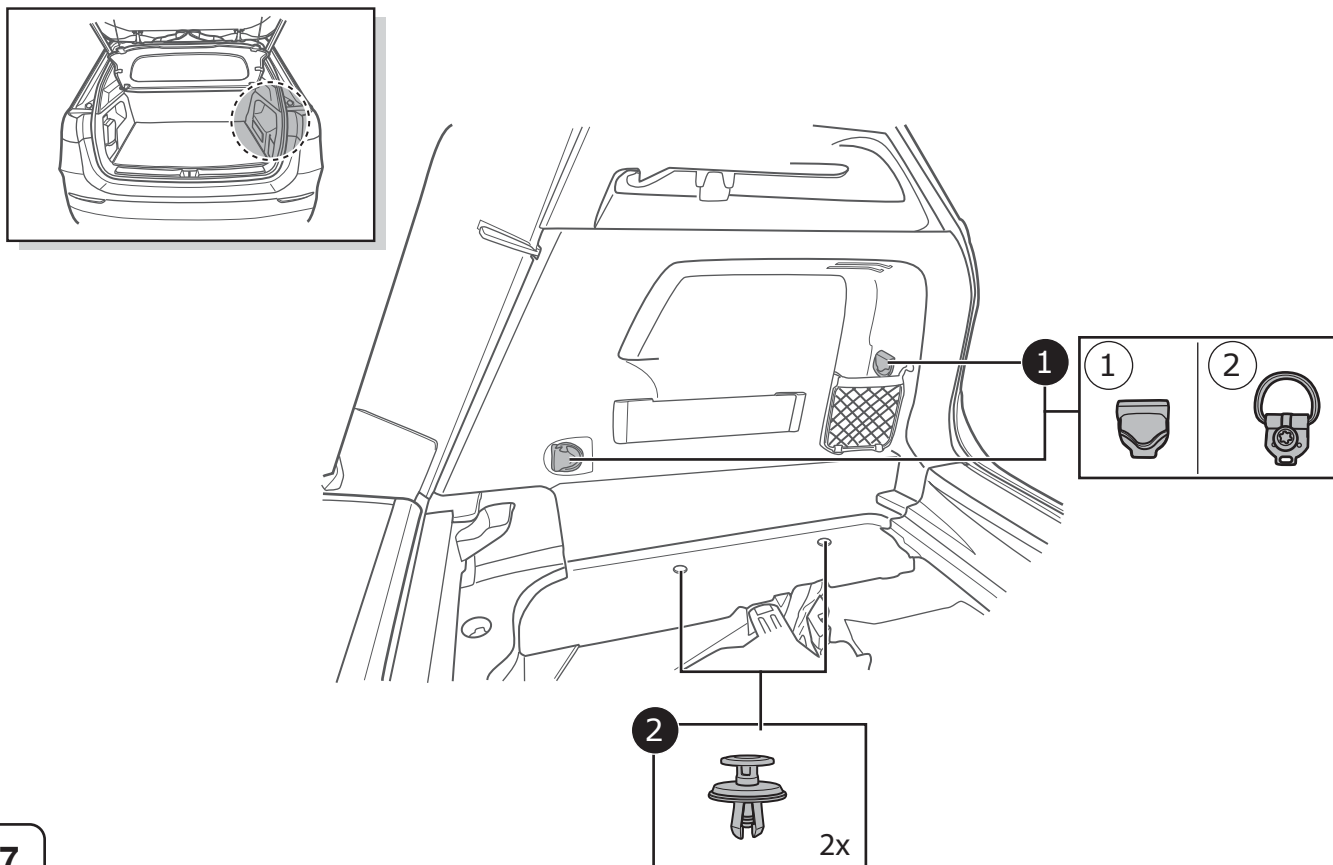




7

## B-Class

  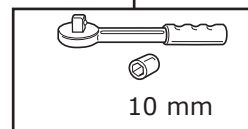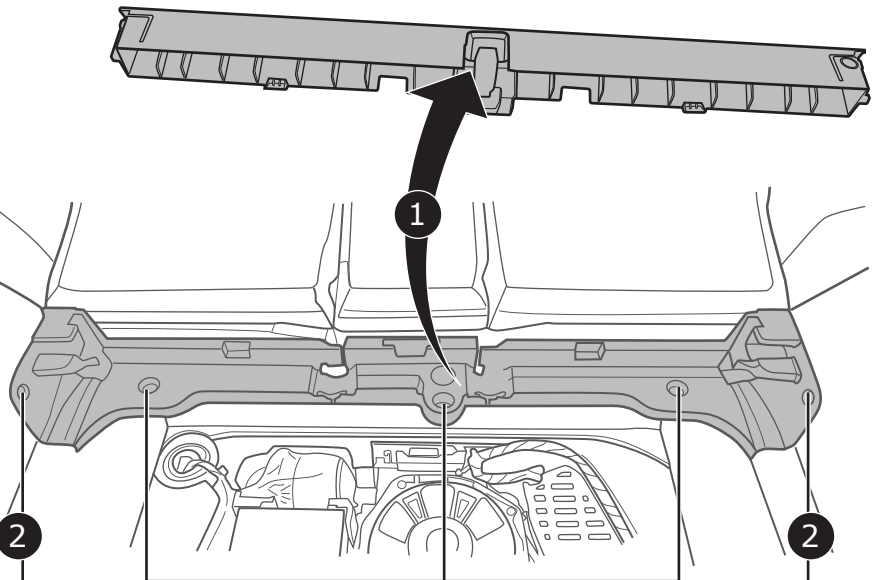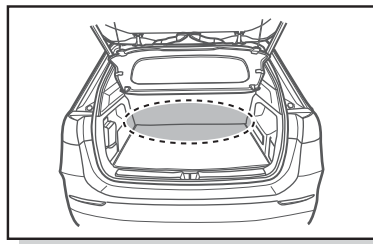



8

## Option only for GLB

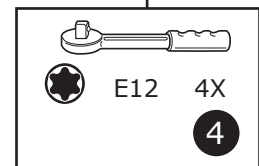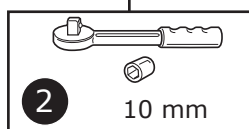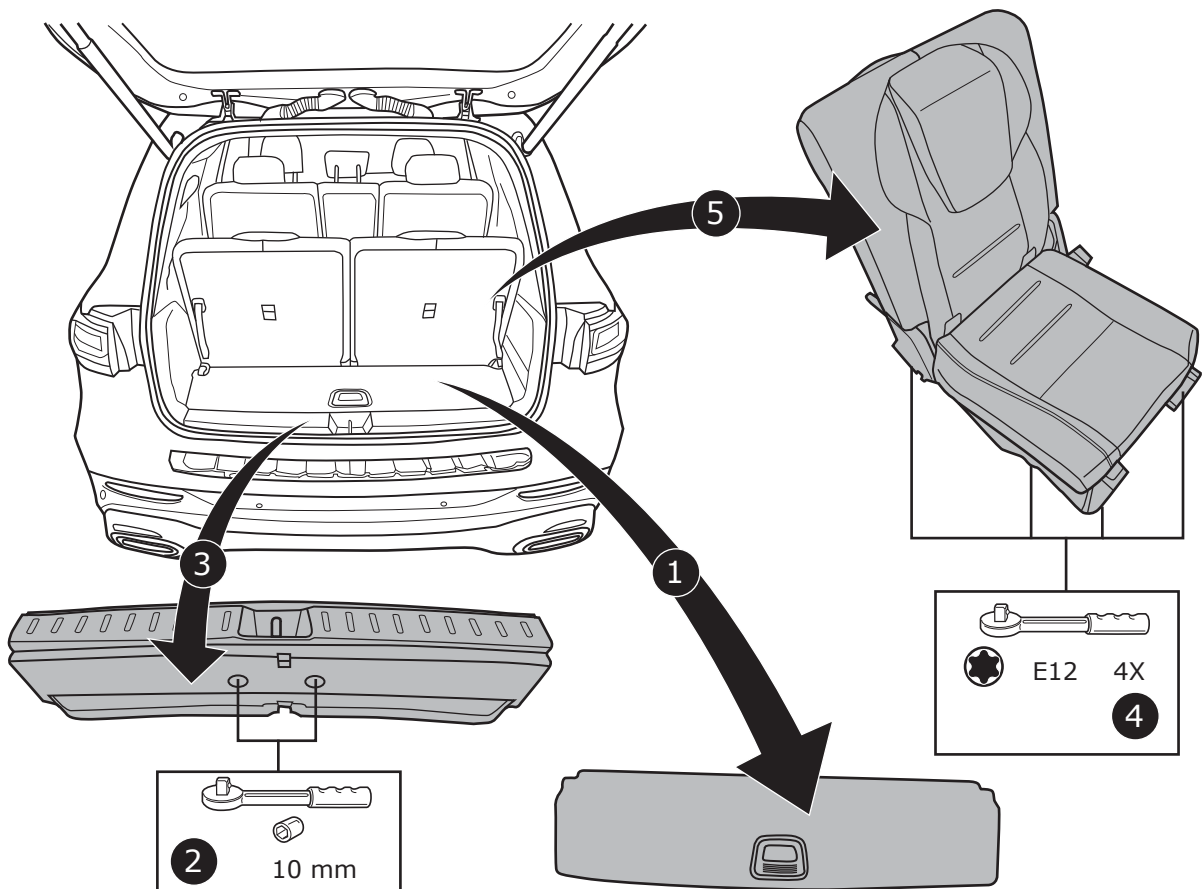



9



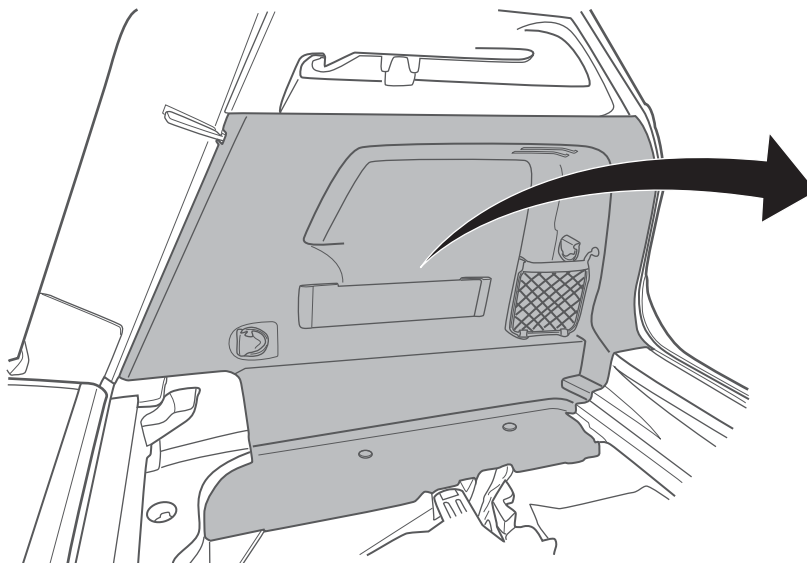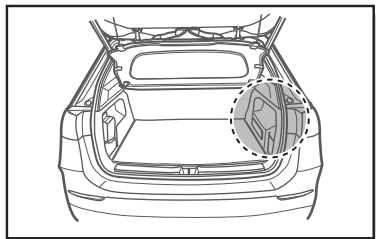

10


All models

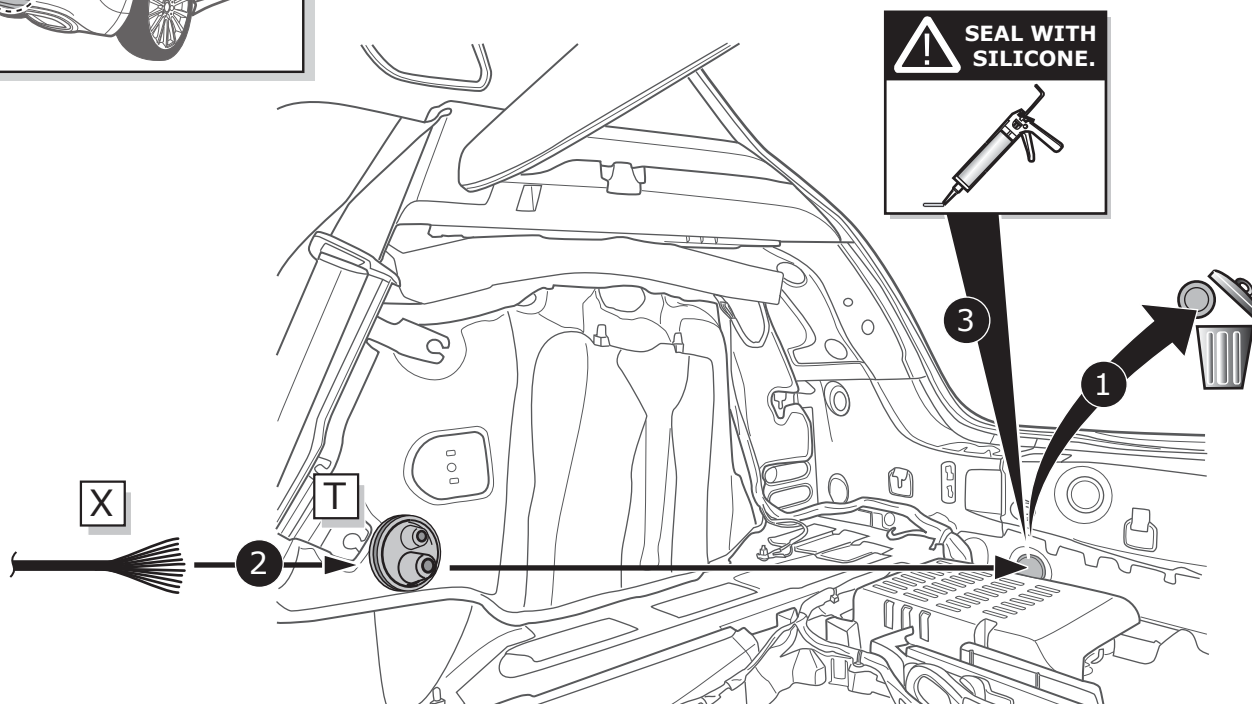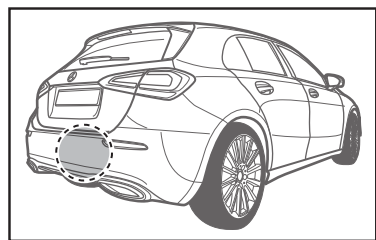

11




Option 1

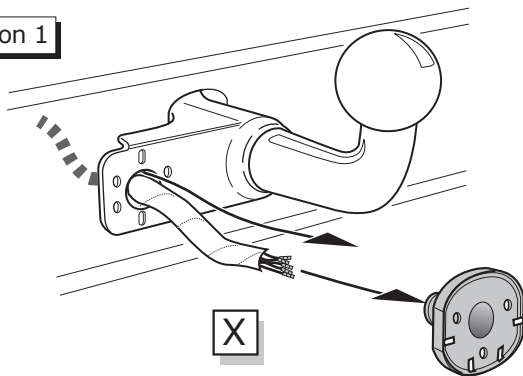


12

Option 2

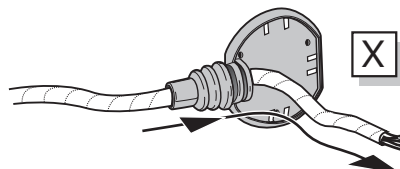

Option 3

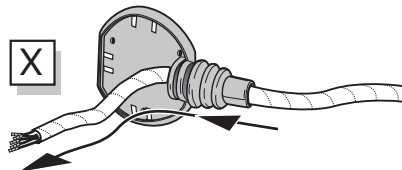


Socket connection




Page 14

13

Option 1

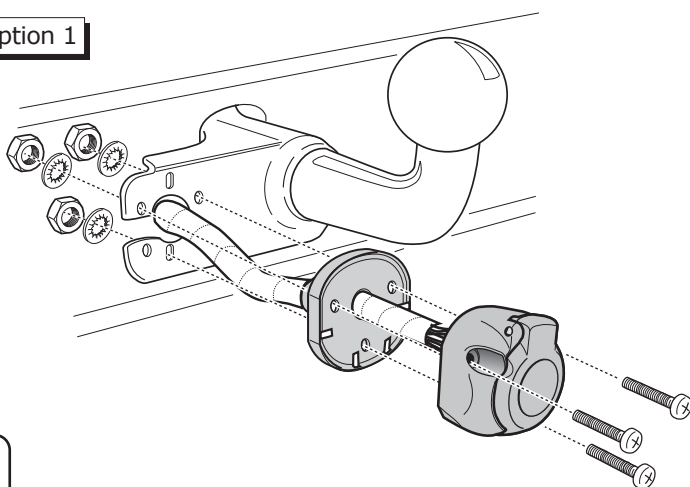


14

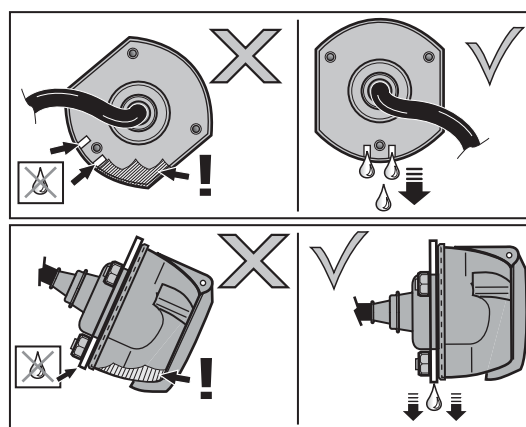


Option 2

1

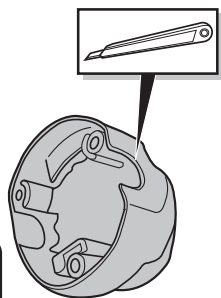


15

2

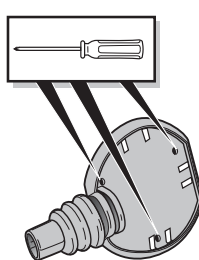


3

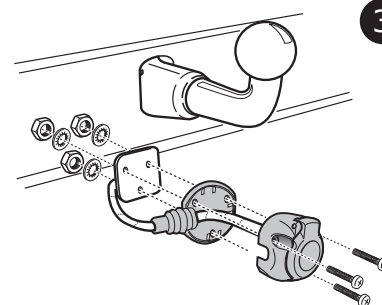


Option 3

1

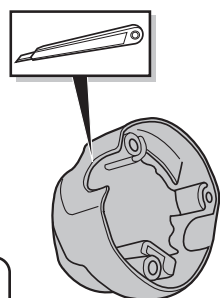


16




2

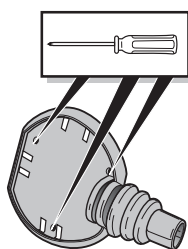

3

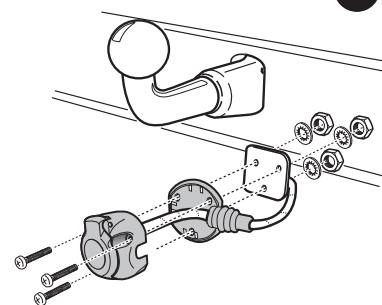


## All models

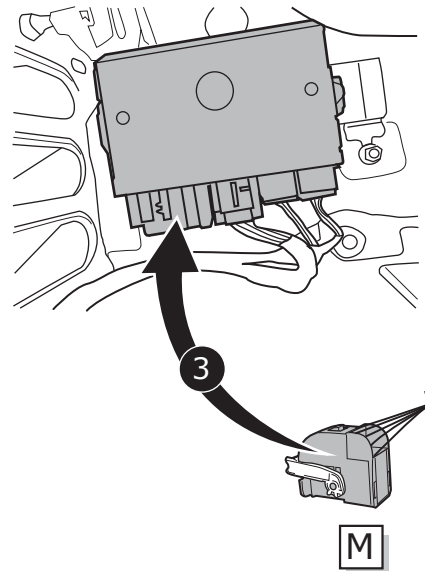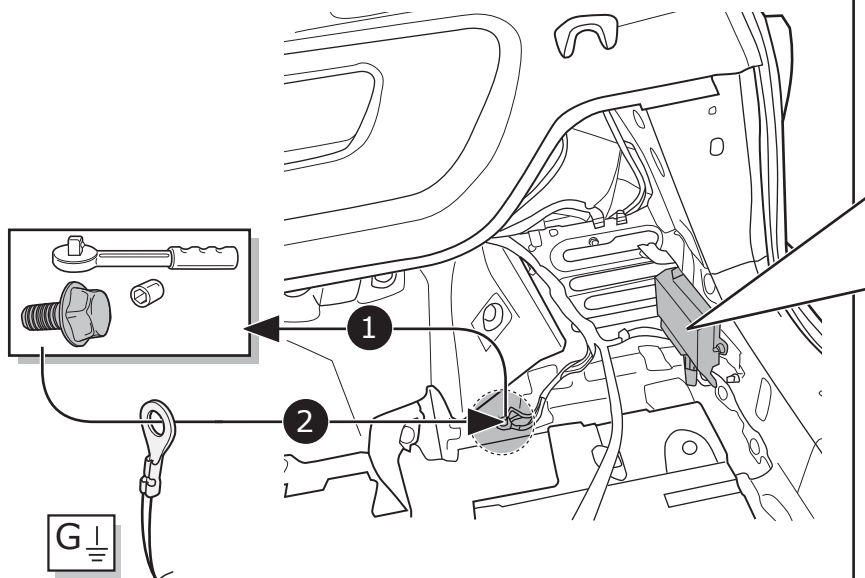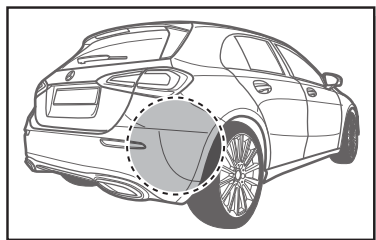


17

## All models

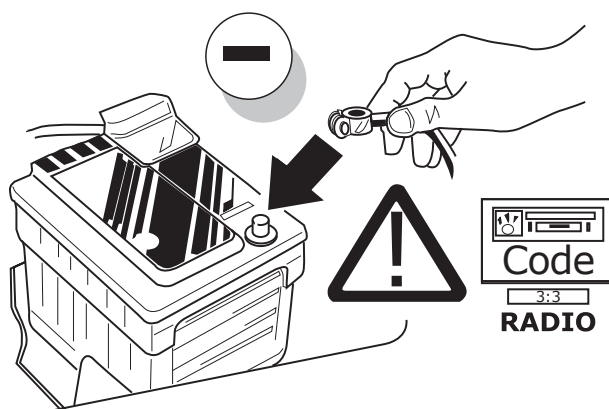

18

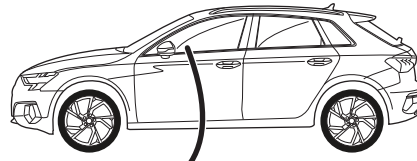

# Complete Diagnostics

remote diagnostic & coding solutions

Call Hotline +44 (0)1952 608 750 - Option 4

**The activation of the trailer functions  
has to be carried as follows:**

1. Connect computer to car
2. Start program
3. Click "Special functions"
4. Click "Input for retrofits or conversions"
5. Enter you user name and password
6. Write by 1FN-550 in the upper (+) field
7. Accept and close the program
8. Start the program again
9. Click "Controllers View"
10. code installed control units as follows:
  - a. Click e.g. "**EZS**" (Ignition)
  - b. Click "Adjust"
  - c. On the left side:  
click updating SCN encoding
  - d. Go online a wait a few seconds
11. Perform the operation with all the control  
units listed below:
  - "**EZS**" (Ignition)
  - "**SAM-rear**" (Signal aquisition module-rear).
  - "**SAM-front**" (Signal aquisition module-front).
  - "**Combined instrument**"
  - "**Headunit/Audio 20**"
  - "**Powertrain**"
  - "**ESP**"

If fitted:

- "**Parksystem**"
- "**360° camera**"
- "**Level Control**"
- "**Rear switching module**"

► Coding finished




## Optional





Trailer Simulator for 7- and 13-pin Sockets

20





## Functional test

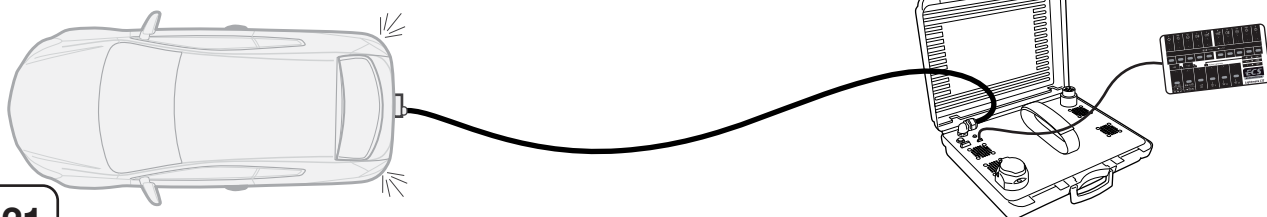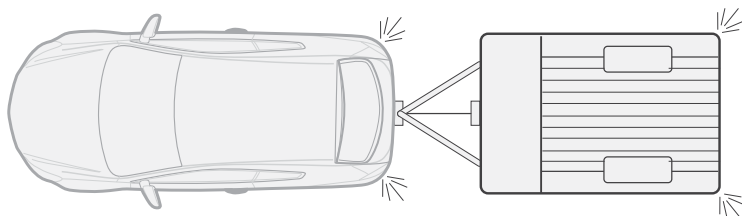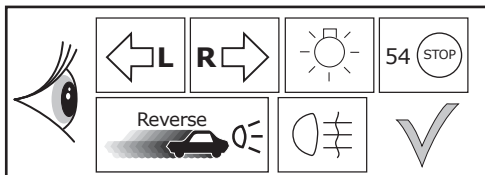

21

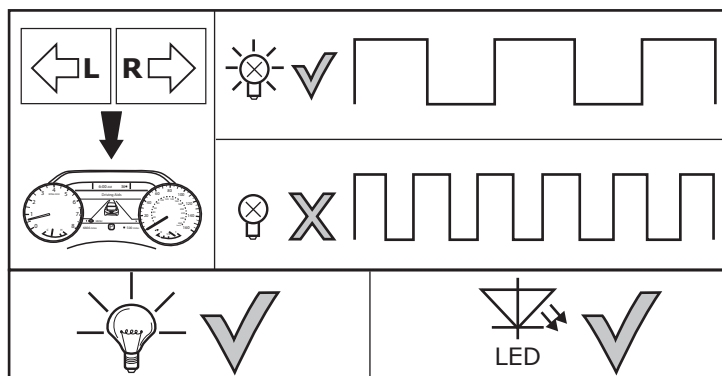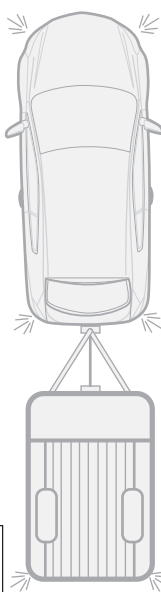


22

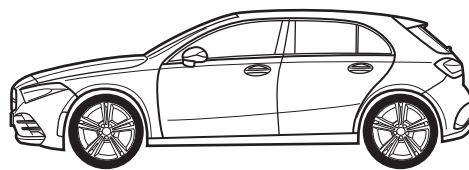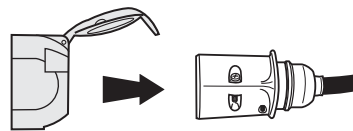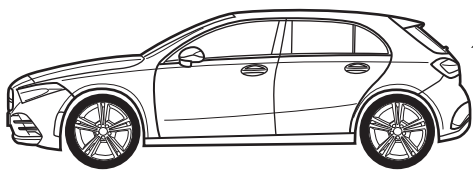 



23

**Optional**


**Adapter socket**

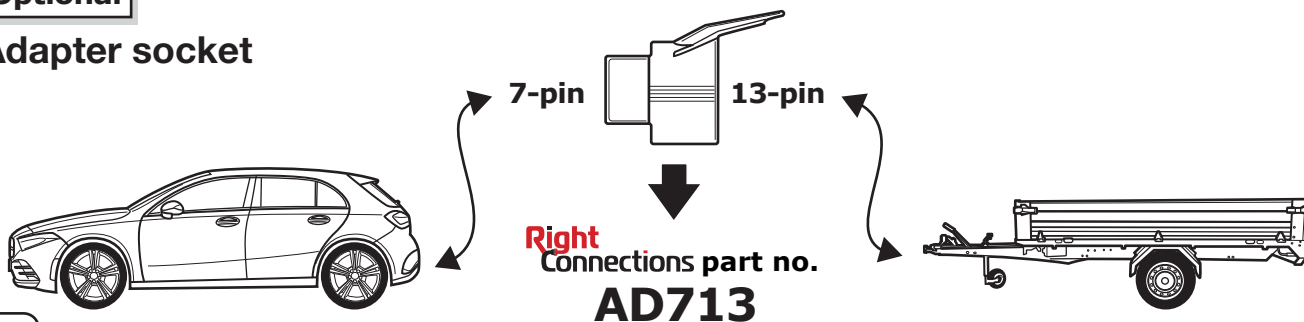

24

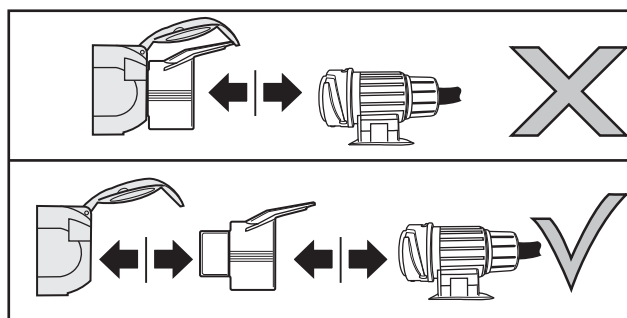
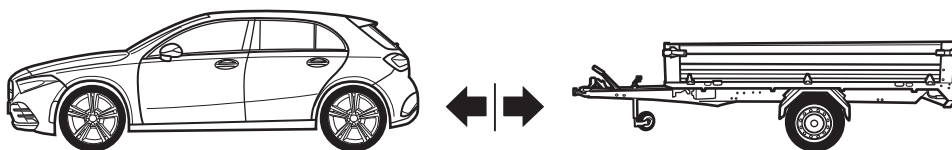


25

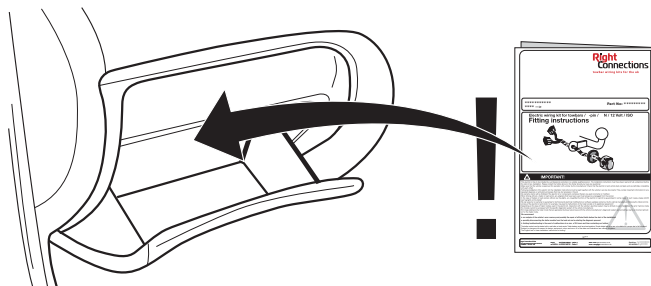

26

## SOCKET CONNECTION

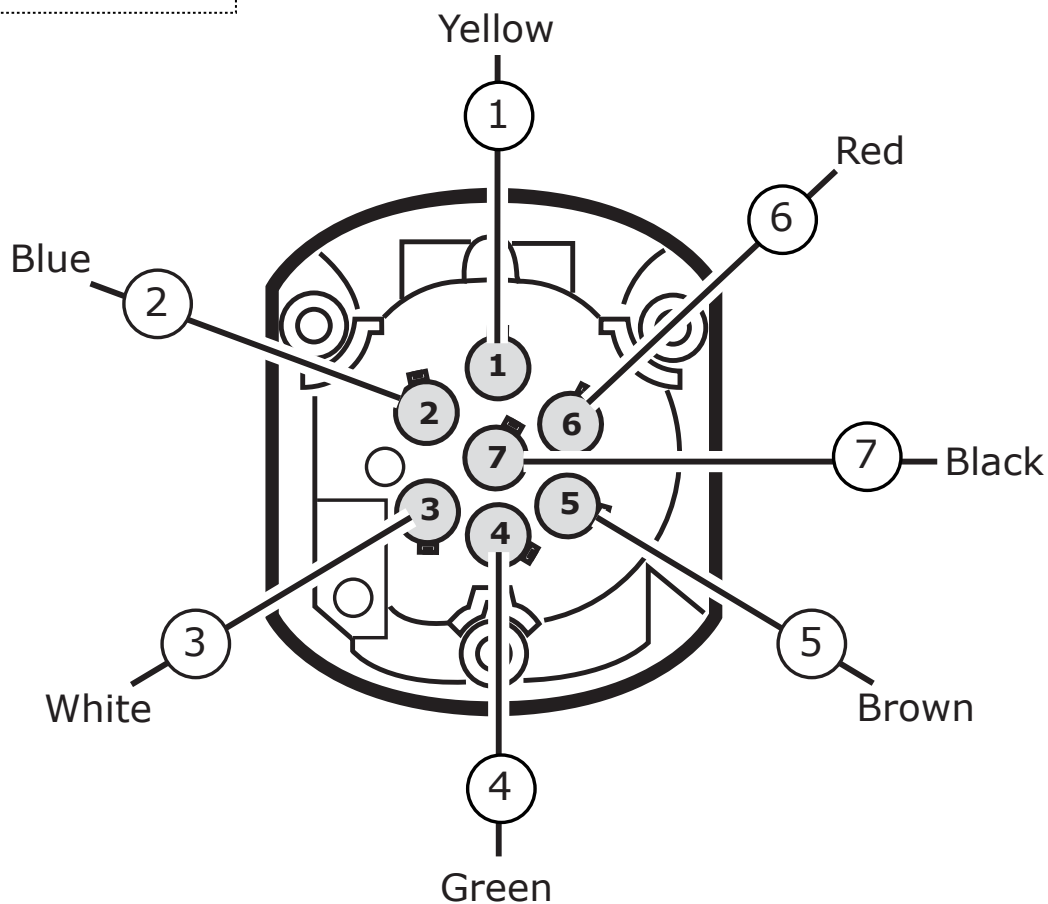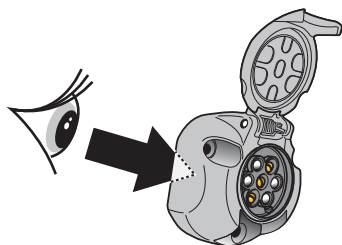

## SOCKET CONNECTION

| DIN/ISO 1724 |        |      |       |       |        |       |        |
|--------------|--------|------|-------|-------|--------|-------|--------|
|              | 1/L    | 2    | 3/31  | 4/R   | 5/58-R | 6/54  | 7/58-L |
| Pmax         | 21W    | 21W  |       | 21W   | 42W    | 3x21W | 42W    |
| Colour       | Yellow | Blue | White | Green | Brown  | Red   | Black  |