

Right Connections

towbar wiring kits for the uk

Ford

Tourneo Connect III 08/2023 >>
Grand Tourneo Connect III 08/2023 >>
Transit Connect III 08/2023 >>



Volkswagen

CADDY V 08/2023 >>
CADDY V Maxi 08/2023 >>
CADDY V Cargo 08/2023 >>
CADDY V Kombi 08/2023 >>
CADDY V California 08/2023 >>
CADDY V PanAmericana 08/2023 >>
T7 Multivan 08/2023 >>



Part No: VW-288-07M

Electric wiring kit for towbars / 7-pin / 12N / 12 Volt / ISO 1724 Fitting instructions

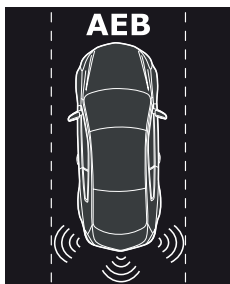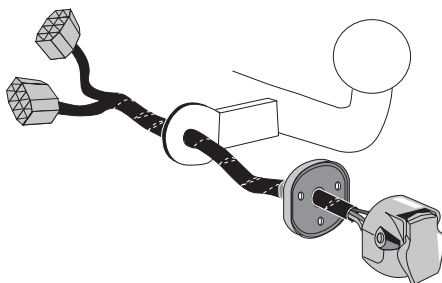

Please note:

This tow bar wiring kit has no influence on the towing vehicle's assistance systems. Assistance systems with emergency brake function (AEB) will not be influenced or automatically deactivated whilst a trailer is attached.

Automatic or remote-controlled parking assistance systems must not be used whilst a trailer is attached!

For more information please refer to the vehicle owner's manual.



IMPORTANT!

This electric kit has to be installed by a professional workshop or a suitable qualified person.

The installation instructions must have been read and fully understood before the start of any installation. Please contact your wiring kit provider or the hotline shown in the footer should you need assistance!

Make sure the vehicle is approved/homologated by the manufacturer to tow a trailer!

Also please check that there is a definite compatibility between this vehicle and the electric kit!

Following the installation of the electric kit, the fitting instructions should be kept together with the vehicle service document and vehicle handbook. The fitting instructions contain important information relating to the use and function of the towing kit as well as for any diagnostic or activation process, that might have to be repeated in the future (e.g. after the performance of a vehicle software update).

All warranty claims will be forfeited if the electric kit or components contained therein are used incorrectly or modified. If a towing socket adaptor has been used to connect to the trailer or bike rack, this must be removed from the trailer socket once the trailer or bike rack has been disconnected.

If the trailer or bike rack is not equipped with a rear fog lamp, depending on the towing vehicle type, the correct function of the towing kit cannot be guaranteed. In such cases, a rear fog lamp should be retro fitted.

This towing electric kit will not be covered under warranty if any technical or electrical modifications or software updates have been performed by the vehicle manufacturer after the initial commissioning of the kit. That applies especially to modifications or updates which may cause malfunctions in the trailer socket or any other part of the trailer electrical equipment!

Depending on the type of trailer module used in this electric kit, diagnostic interrogation with the vehicle's electrical system may be limited or will not function. The error memory inside the trailer module may not be able to be accessed by vehicle manufacturers diagnostic system.

Error logs relating to the trailer electrical equipment, that may be generated in the vehicle manufacturers diagnostic system as a result of a test procedure, may be due to the incorrect installation of the towing electric kit or the false activation of the trailer module.

We always recommend whenever possible, the following troubleshooting process:

→ **An analysis of the vehicle's error memory and possibly clearing of all faults before the start of the installation!**

→ **Try disconnecting the trailer module from the towing harness and re-start the fault clearing process!**

→ **If in doubt, limit the time for troubleshooting to a max of 0,5 hours and call our Technical Support Team!**


Please follow our instructions carefully and always test the towing electrics using a true lighting board or a specifically designed bulb tester. If an LED tester is used, ensure it is equipped with correct load resistors or malfunctions will occur!

This instruction is subject to changes and we reserve the right to make changes to design, colour etc.

All of the data and illustrations may not be an exact representation but the text contained in this instruction must be observed!




**This kit does not support any of the assistance systems of the vehicle.
Vehicle assistance systems may have to be deactivated manually
when towing a trailer!**

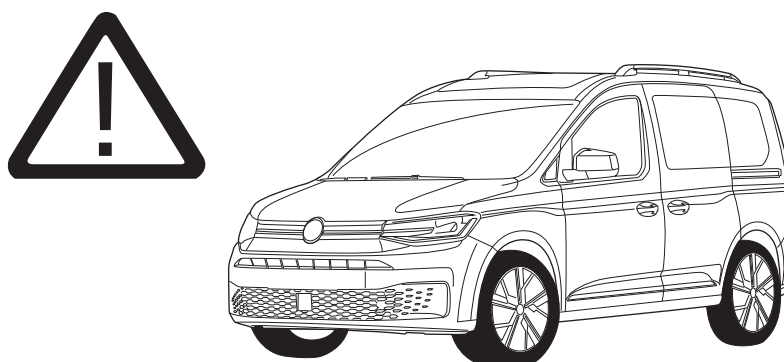

**Please note that the operation of the electric tailgate will continue
to function with a bicycle carrier/trailer/caravan attached.
It must be operated manually.**

INFO

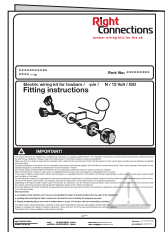

U1

L2

L3

L1

B

G

L5


L4

30x



M

T


X

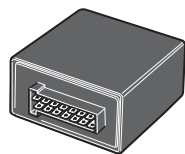

M

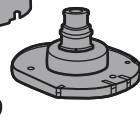

B

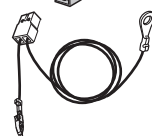

G

L5

L4

L6

L7



3x




3x



3x



2x




6x

U2




U3




1x

20 Amp.

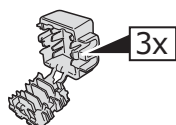


3x



2x


VW T7 Multivan

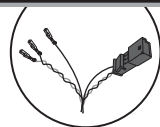


34-59

11-32, 60-63

6-10

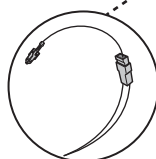

FORD TOURNEO
& VW CADDY

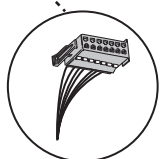



SYMBOL EXPLANATION

58L	Left taillight (58-L)
58R	Right taillight (58-R)
54	Stop light (54) / high mounted, third stop light (54)
	Turn signal indicator left
	Turn signal indicator right
	Rear fog light(s)
	Reversing lights(s)
+30	Permanent power supply / 13pin socket, chamber 9
+15	Charging wire for trailer battery/ 13pin socket, chamber 10
	Trailer / Trailer recognition
+30	Permanent current power supply
+15	Voltage after ignition

	Ground or Earth (31)
	Ground connection battery terminal lug
	Positive connection battery terminal lug
	Fuse / fuse capacity 20 Amp
	Loudspeaker / buzzer
	Park distance control
	Switch / source of function
	Connect together
	Disconnect
	PDC cut off
	Look carefully at selected area
	Present / Occupied / OK


	Not present / Not occupied / not OK
	Left
	Right
	Acoustic indication
	Attention / important advice
	Reusable
	Trash bin
	Use tape
	Option
	Information
	Measure the voltage
NO NC COMMON	Normally open Normally close Common

TOOLS

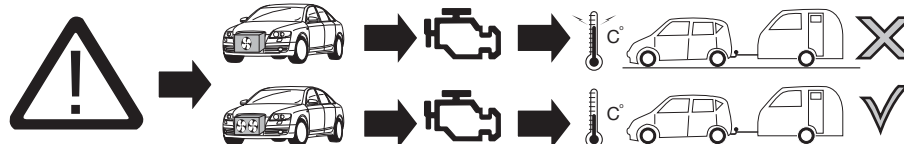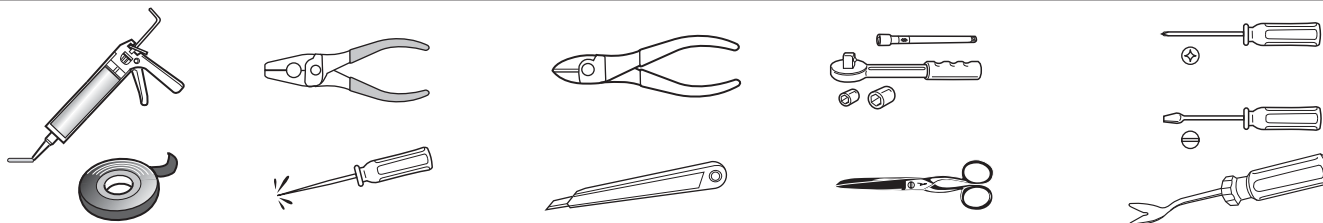

ATTENTION!

The vehicle's cooling capacity may have to be increased when retrofitting a trailer coupling!
You must observe the manufacturer's instructions!!

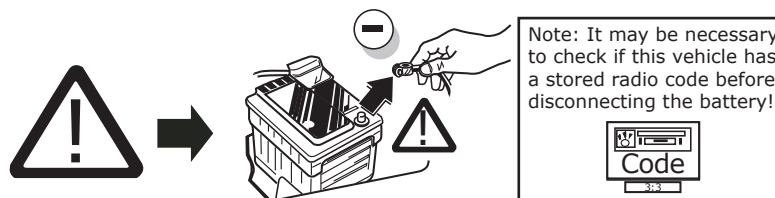

ATTENTION!

In order to avoid mal-functions and damage to the vehicle's electrical system the earth terminal **must be disconnected** from the vehicle's battery **before starting work!**

1



Both the trailer module and the vehicle's control unit for the electrical system can be damaged during work on the data bus connections if the battery is not disconnected!

Please pay attention to the manufacturer's instructions when disconnecting and reconnecting the vehicle's battery!




**FORD TOURNEO
& VW CADDY**

VW T7 Multivan


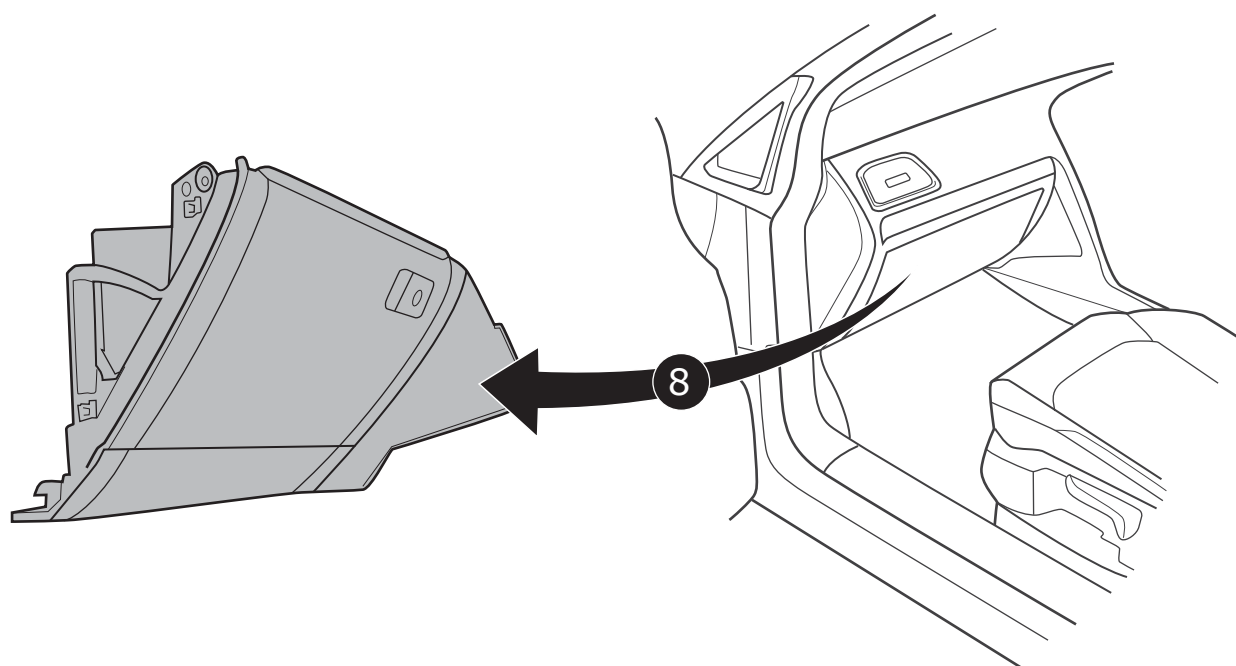
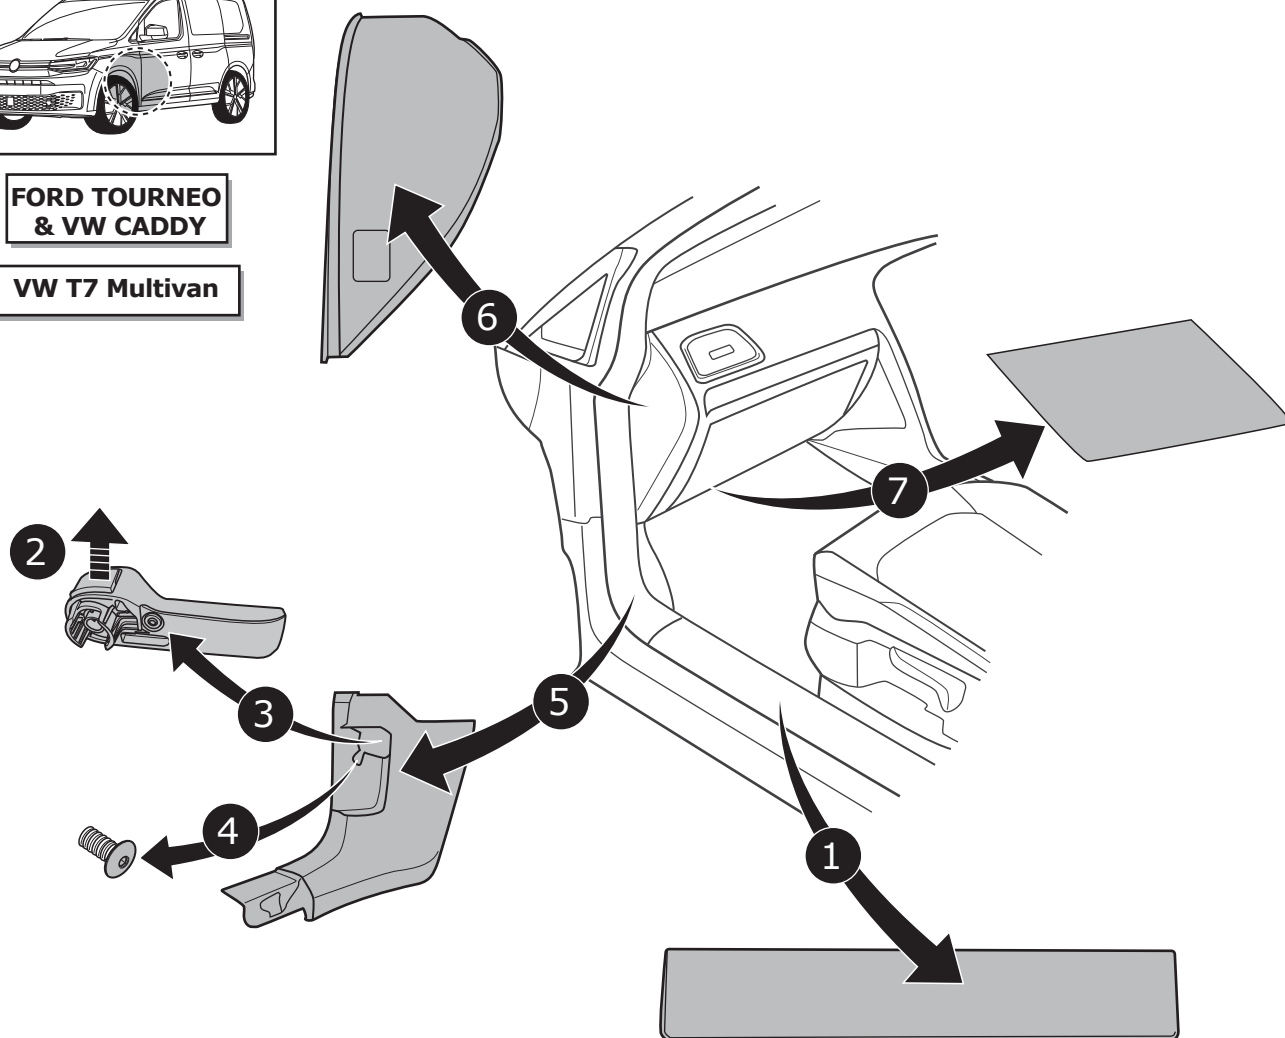


2

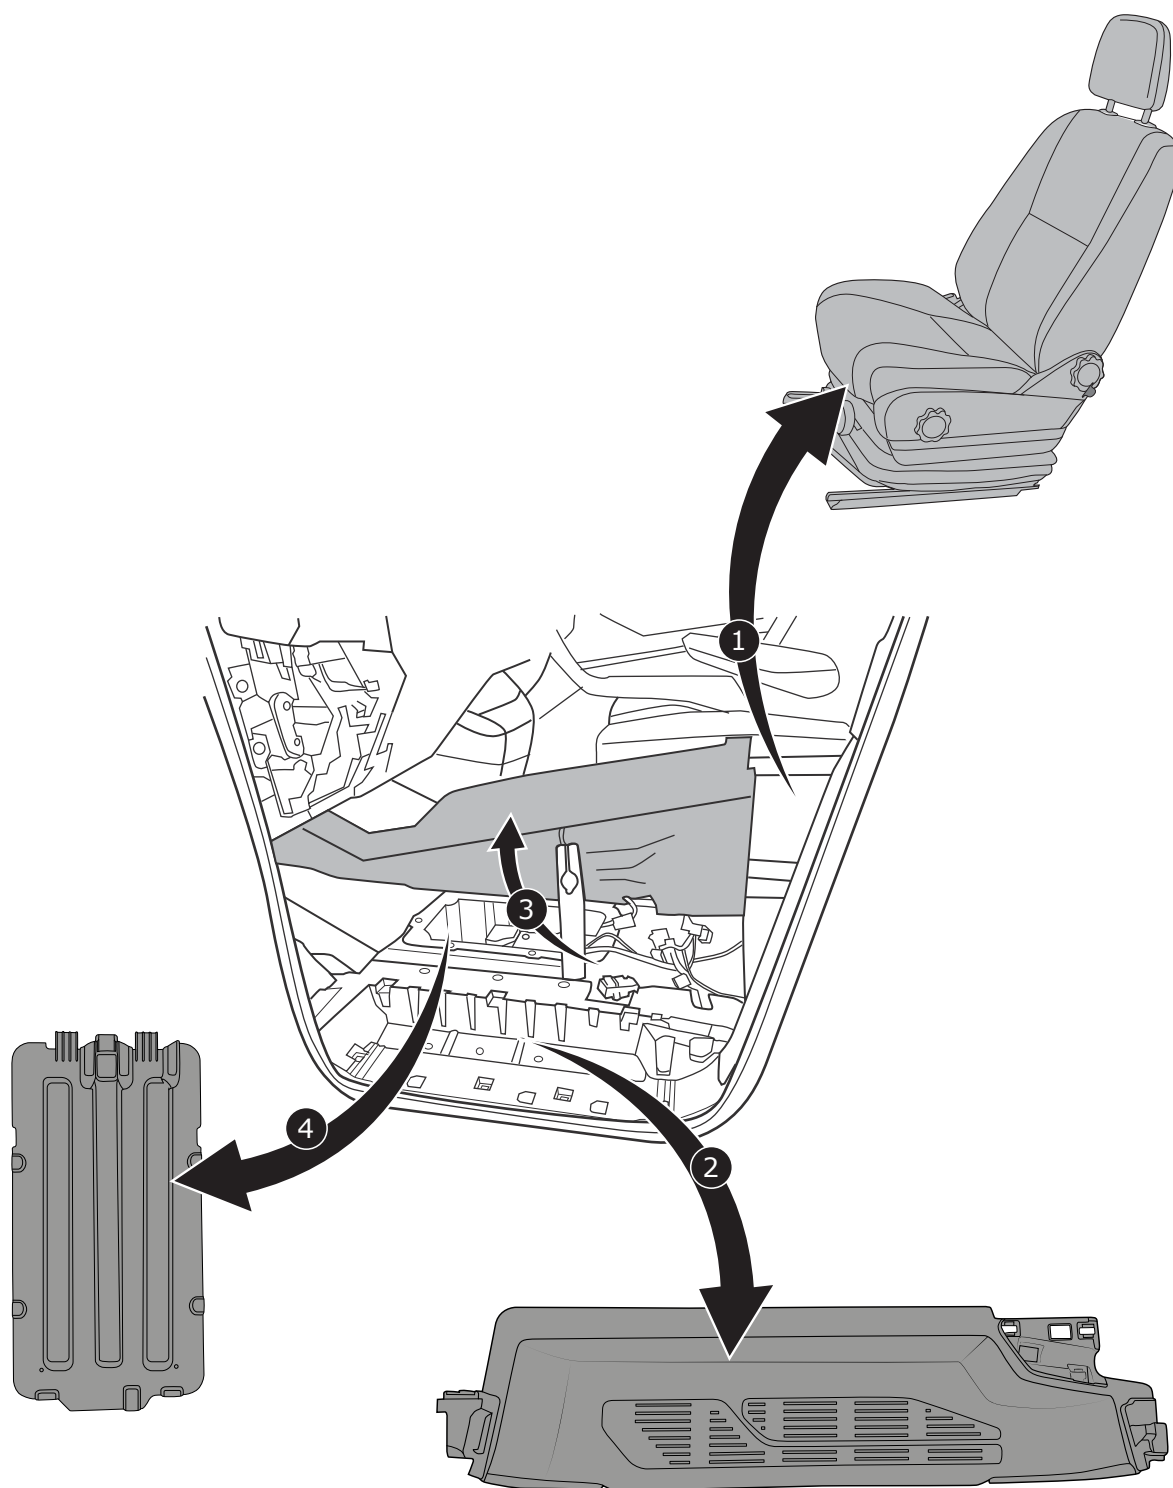





**FORD TOURNEO
& VW CADDY**

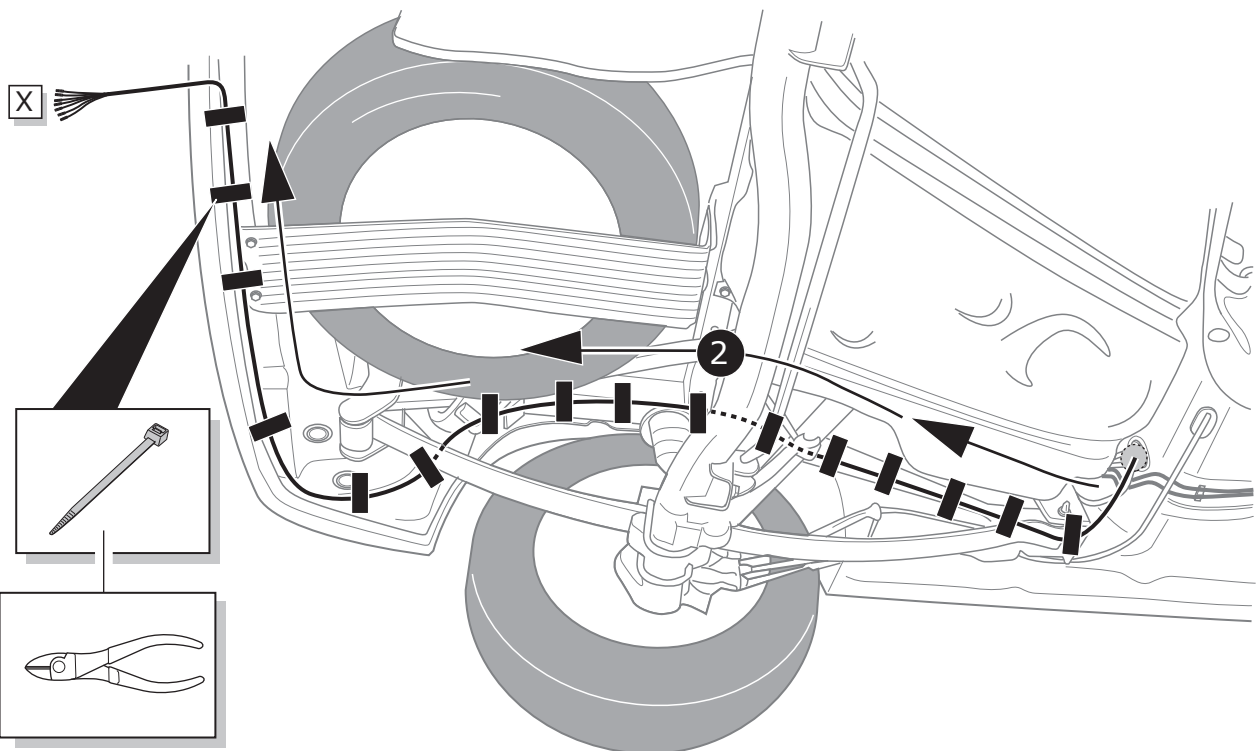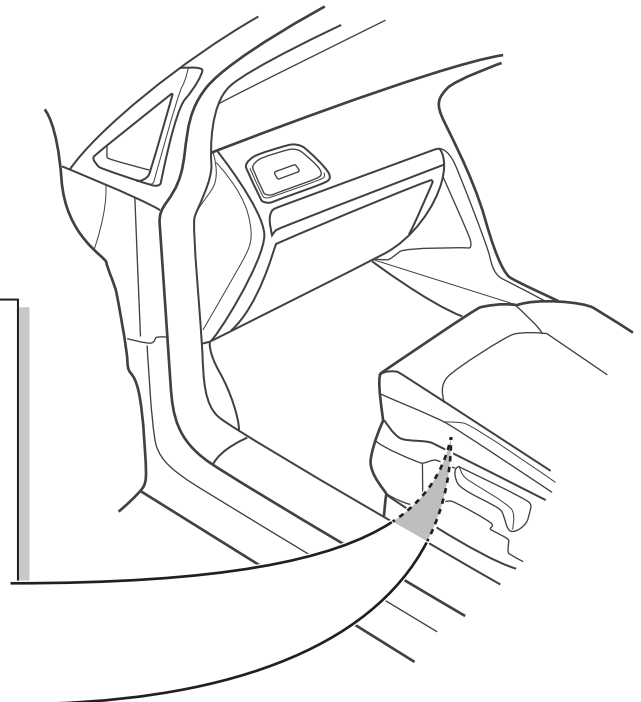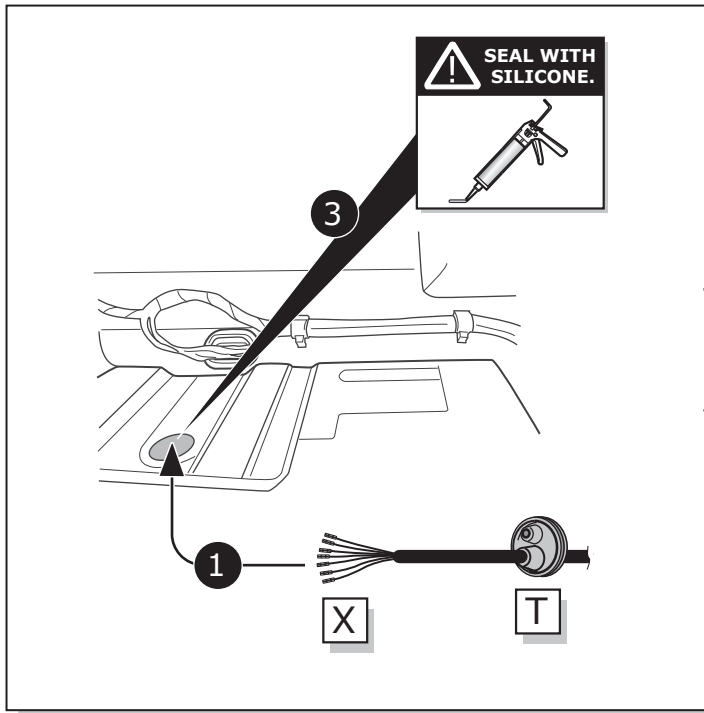

4




VW T7 Multivan

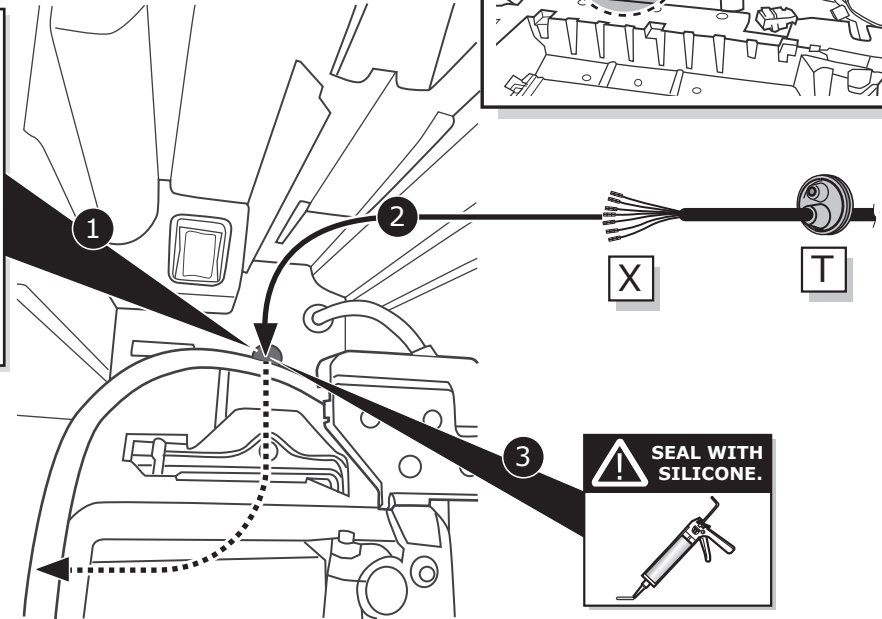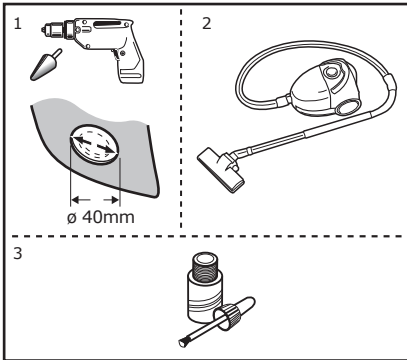


5

Option 1

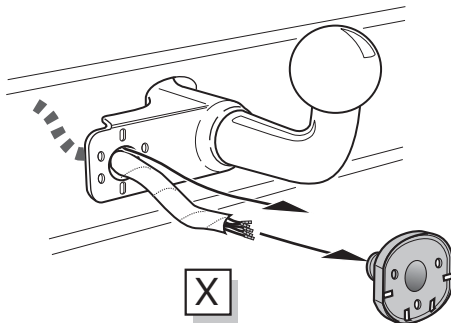


6

Option 2

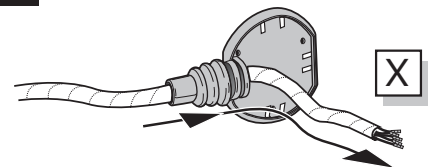

Option 3

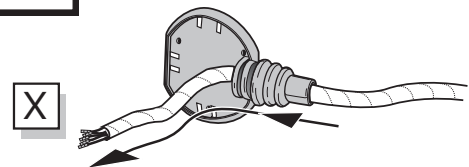



Socket connection



Page 31

7


Option 1

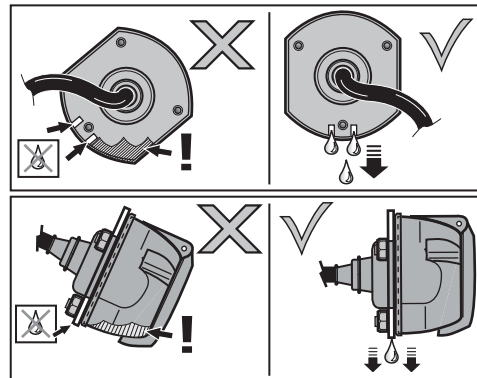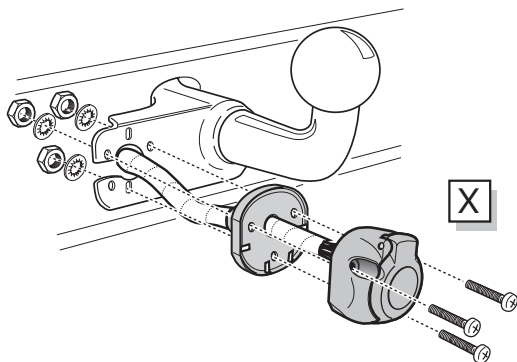


8

Option 2


1

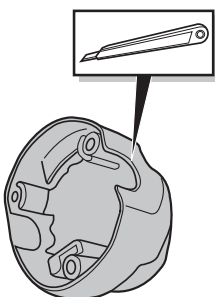

2

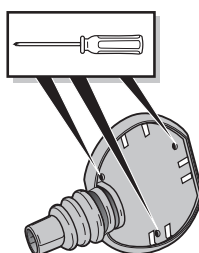


3

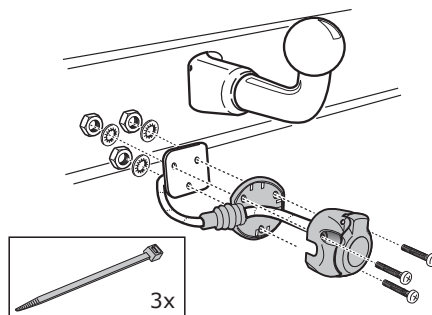


9

Option 3


1

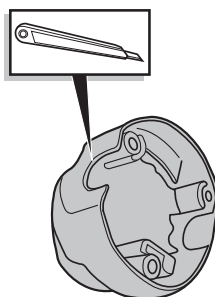


2

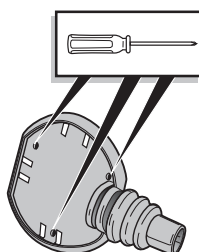

3

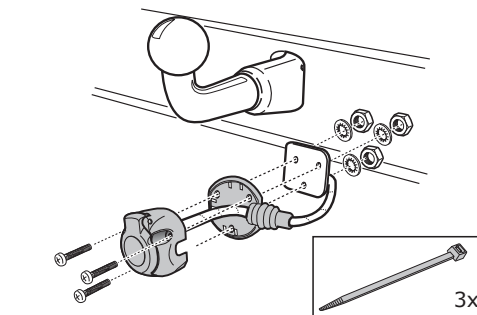


10

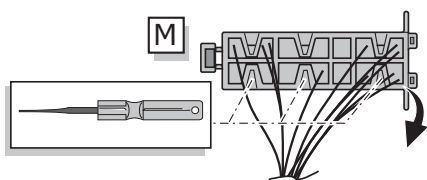

1

2



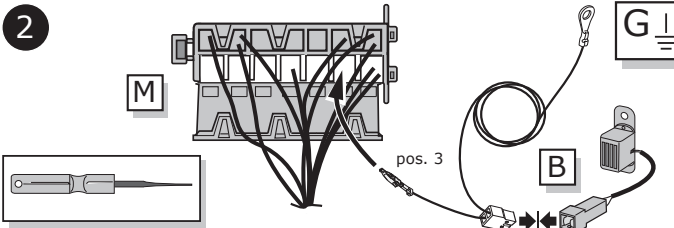


3




4

5



6

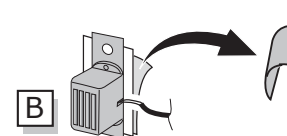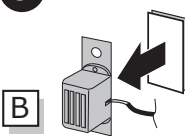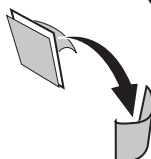

11

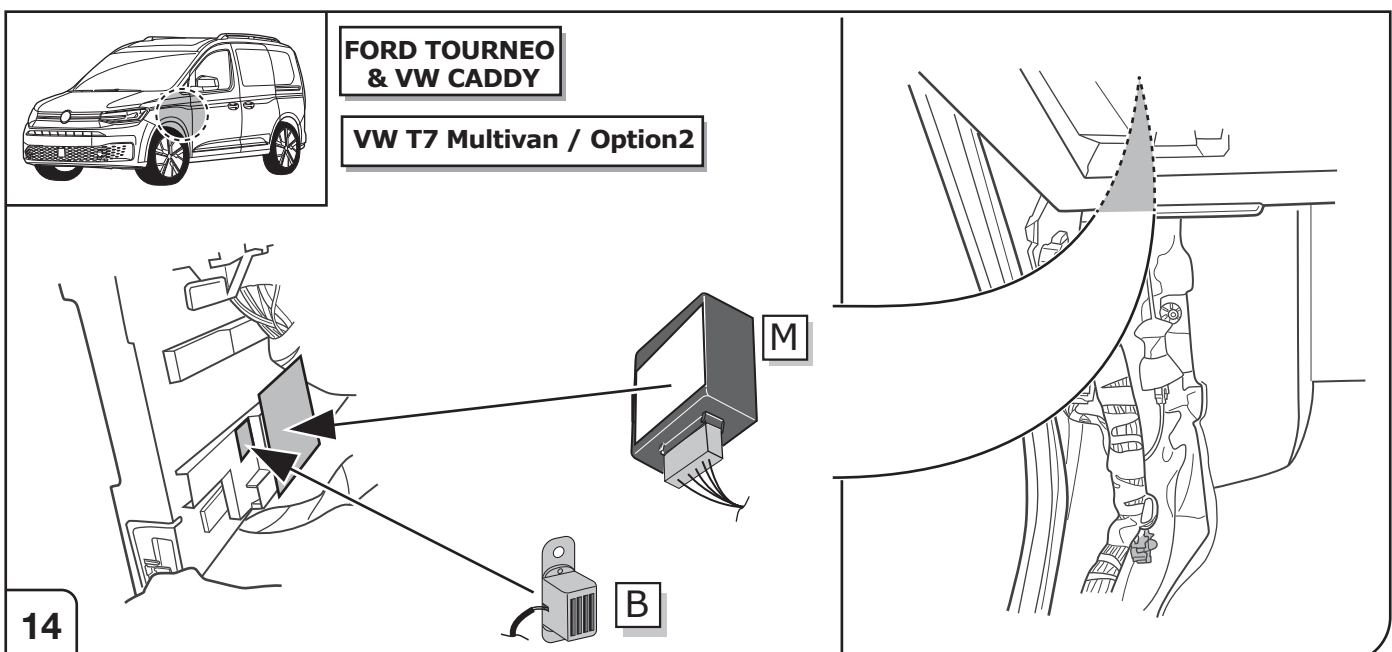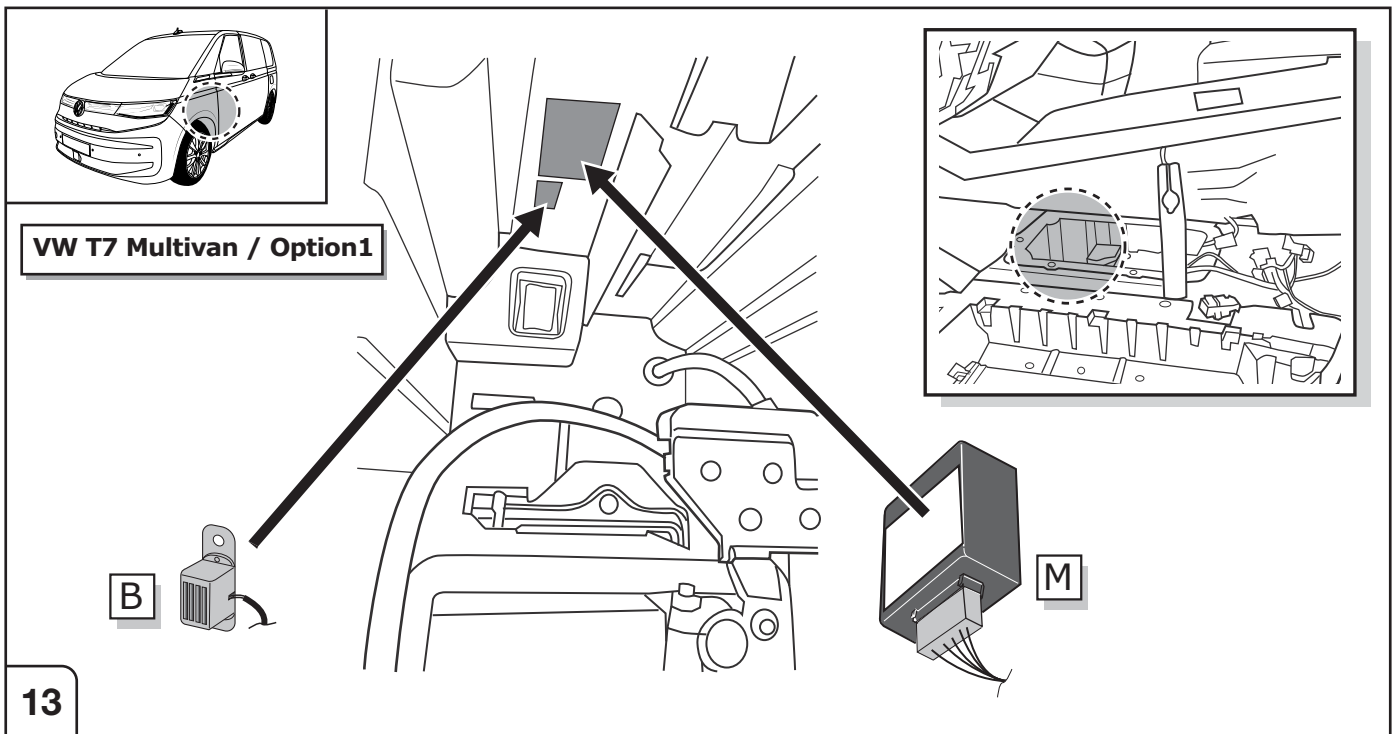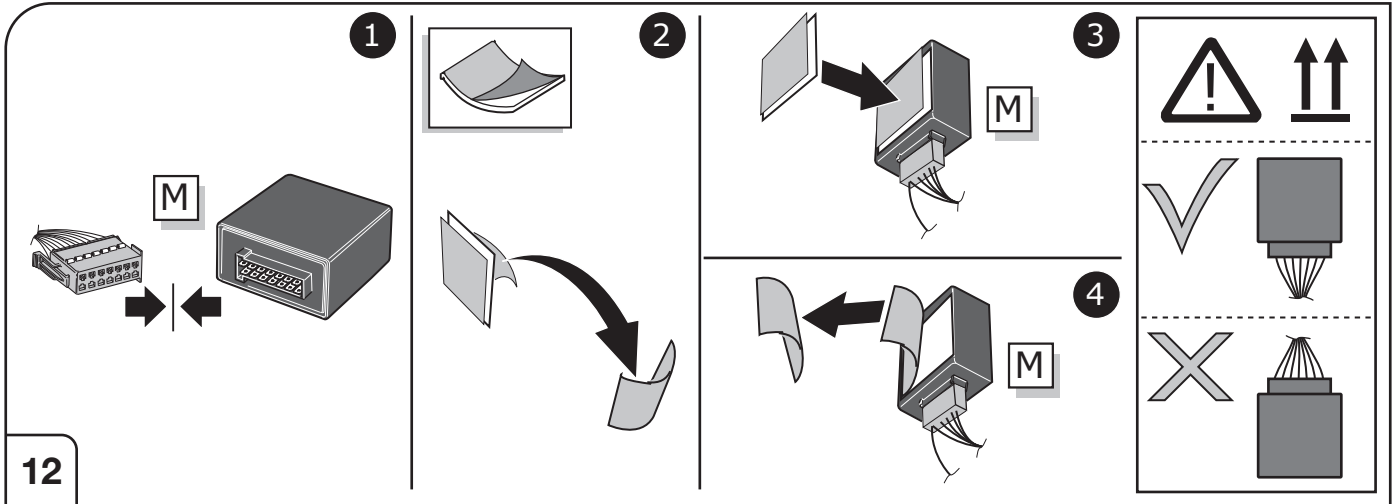


**FORD TOURNEO
& VW CADDY**

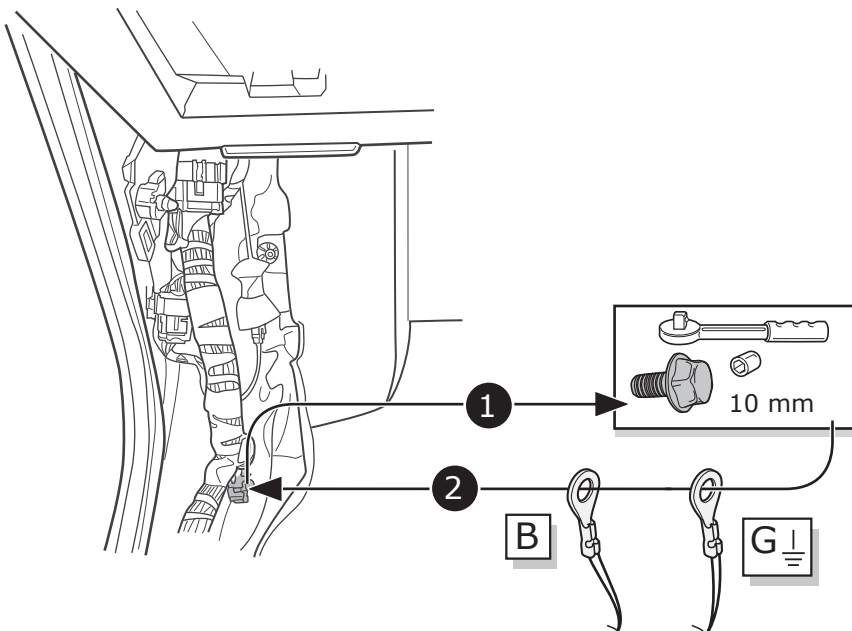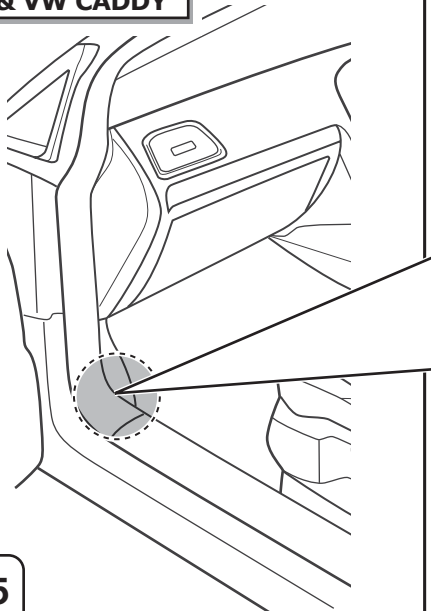

15





VW T7 Multivan

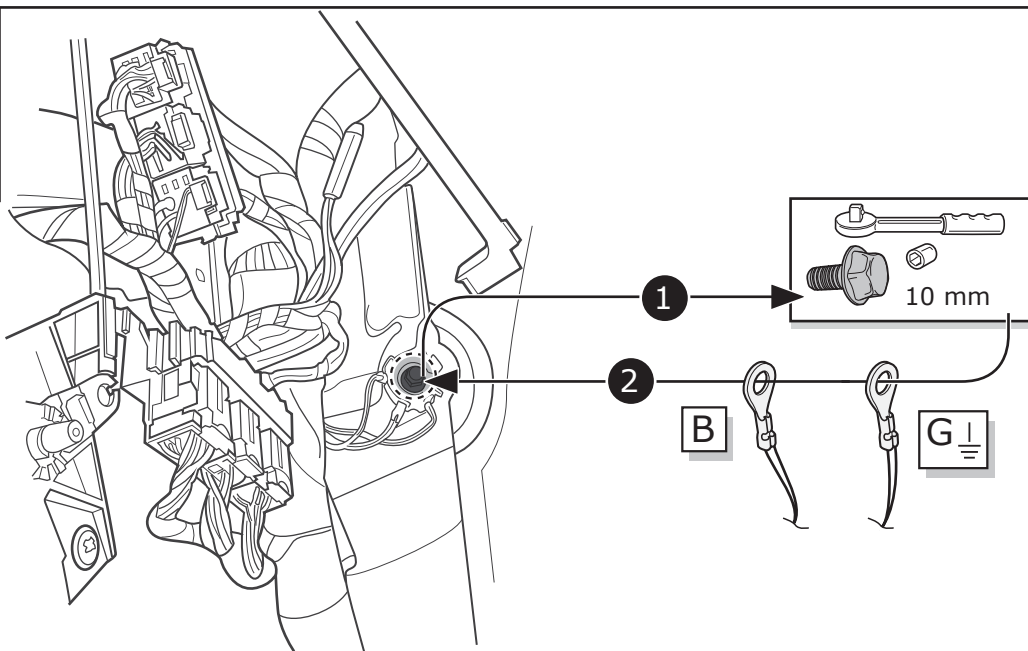

16

**FORD TOURNEO
& VW CADDY**


Body Control Module

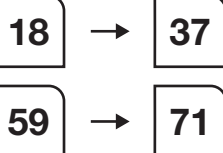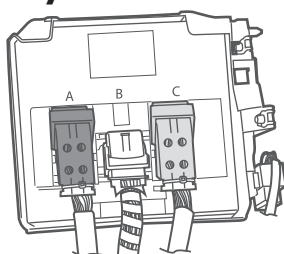


17

VW T7 Multivan


Body Control Module

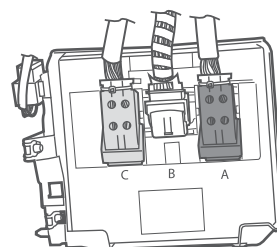

FORD TOURNEO & VW CADDY

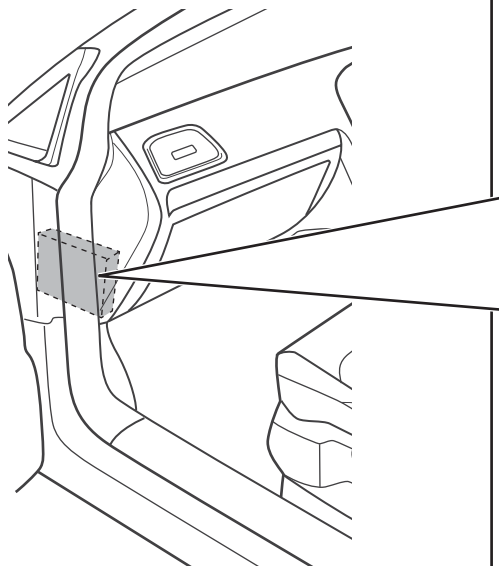


Body Control Module

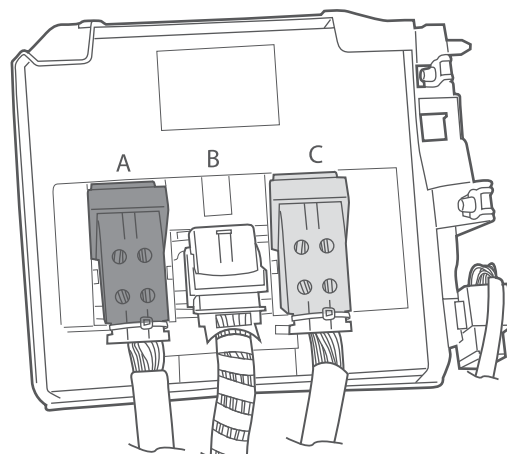


18

CANbus OPTION A




With
Avec
Mit




19


CANbus OPTION B



With
Avec
Mit

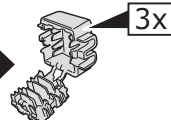


CANbus OPTION C



XXXXXXXXXX~~X~~XXXXXXXXXX

CANbus OPTION A

Body Control Module

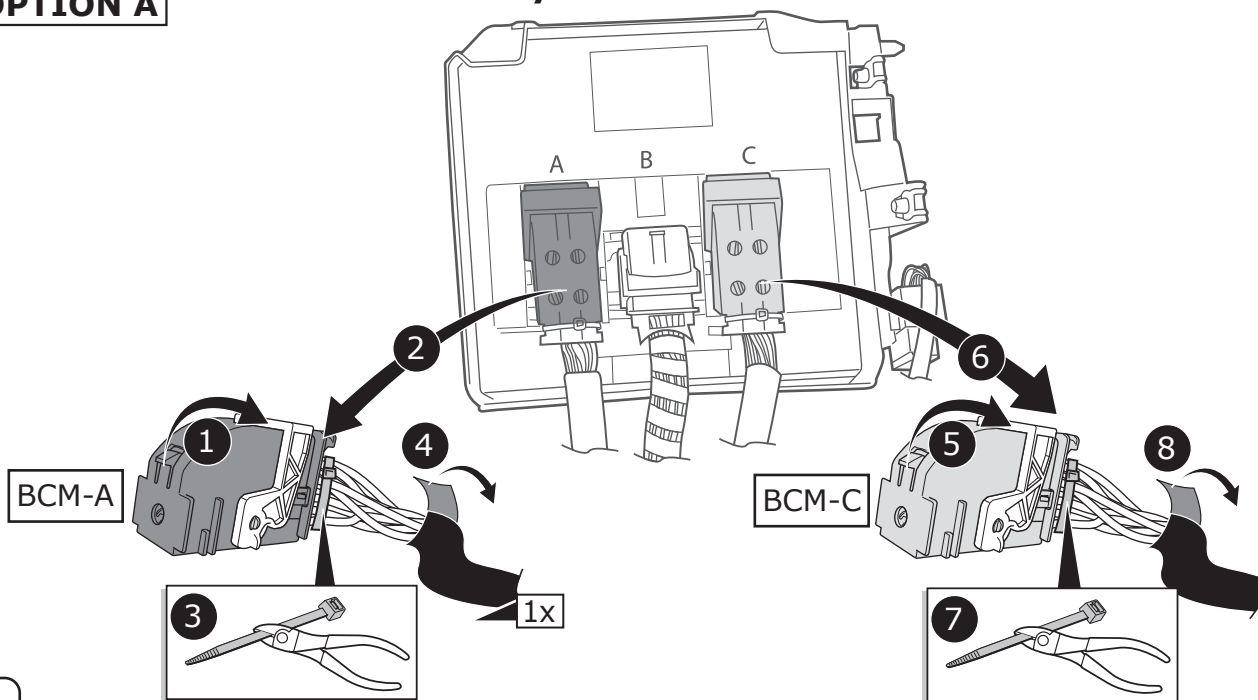





20

CANbus OPTION A

BCM-A

2


3

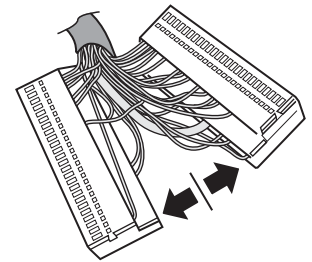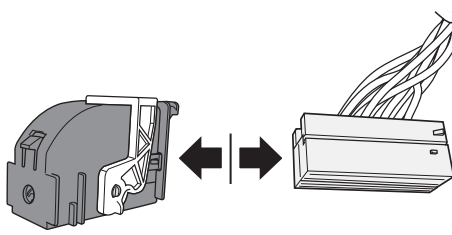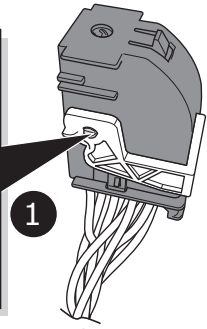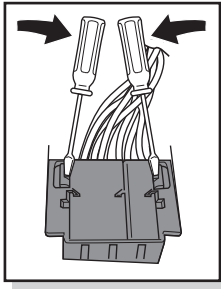

21

CANbus OPTION A

BCM-A

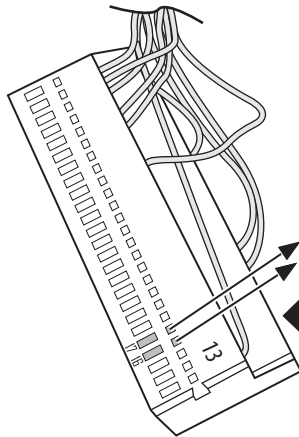

CAN L Orange/Brown
Pos. 17


CAN H Green
Pos. 16

Can-bus
Datawire

22

CANbus OPTION A

BCM-A

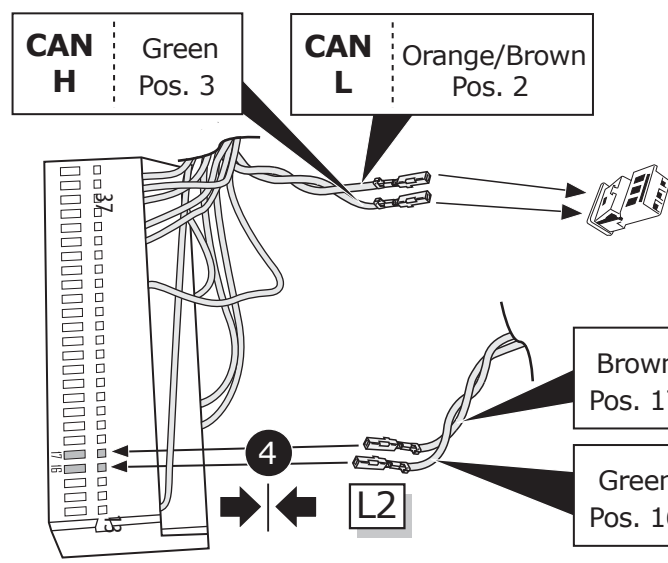





23

CANbus OPTION A

BCM-A

1

2

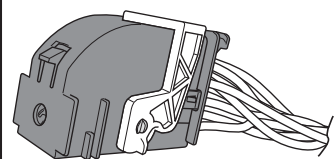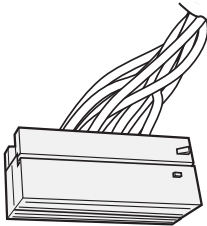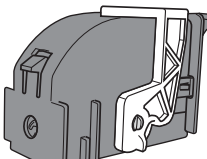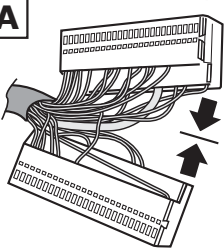


24

CANbus OPTION A




BCM-C

2

3

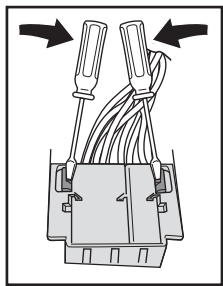


1

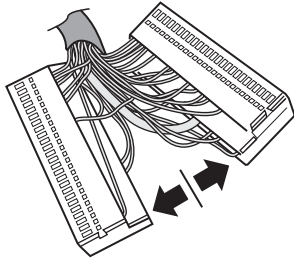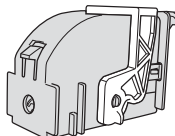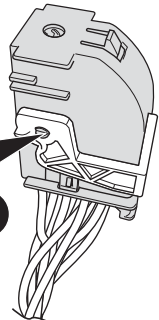

25

CANbus OPTION A

BCM-C

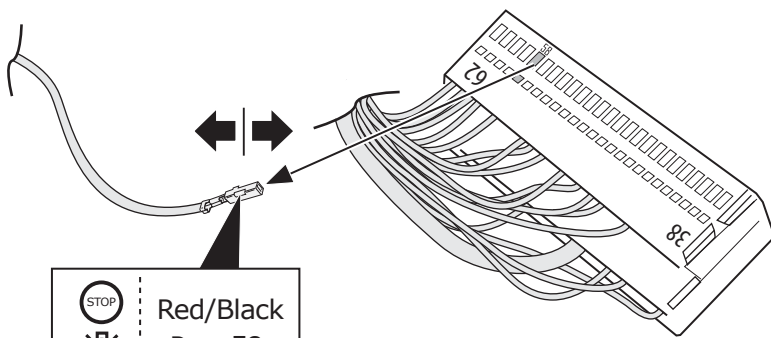


STOP
Red/Black
Pos. 58

26

CANbus OPTION A


BCM-C

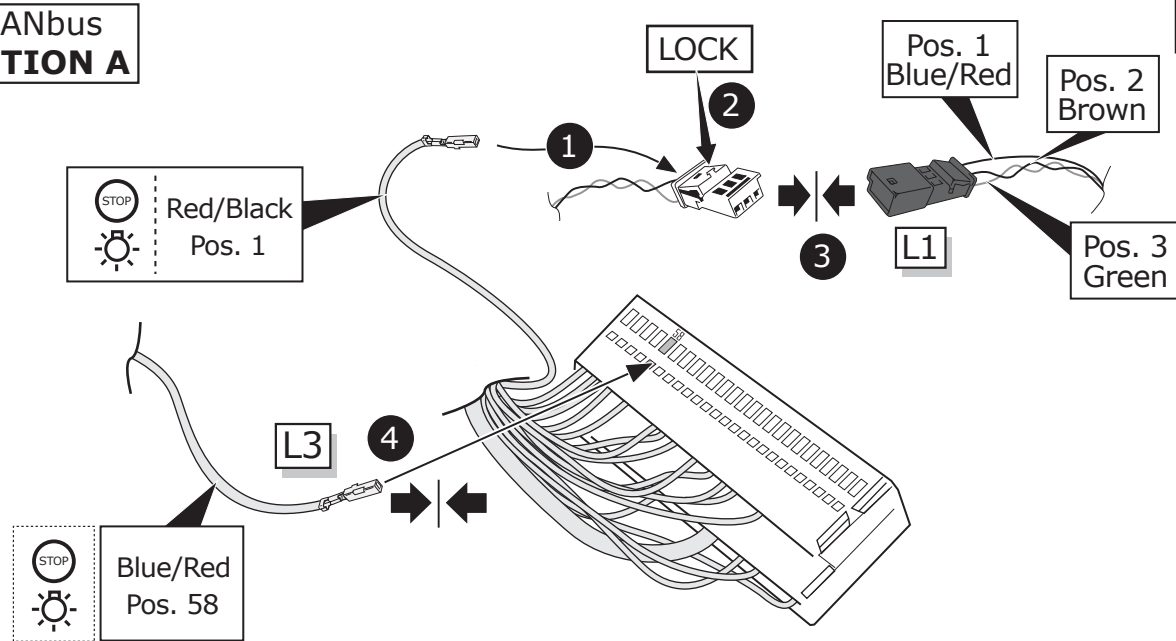


27

CANbus OPTION A



BCM-C

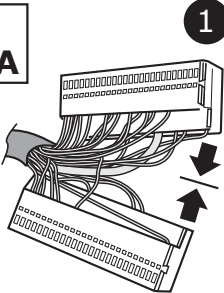

1

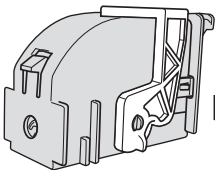


2

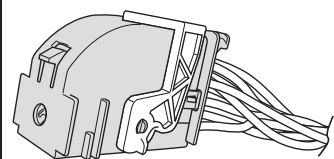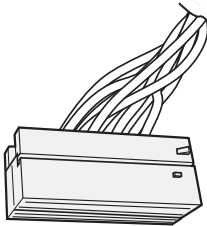

28


CANbus
OPTION A

Body Control Module

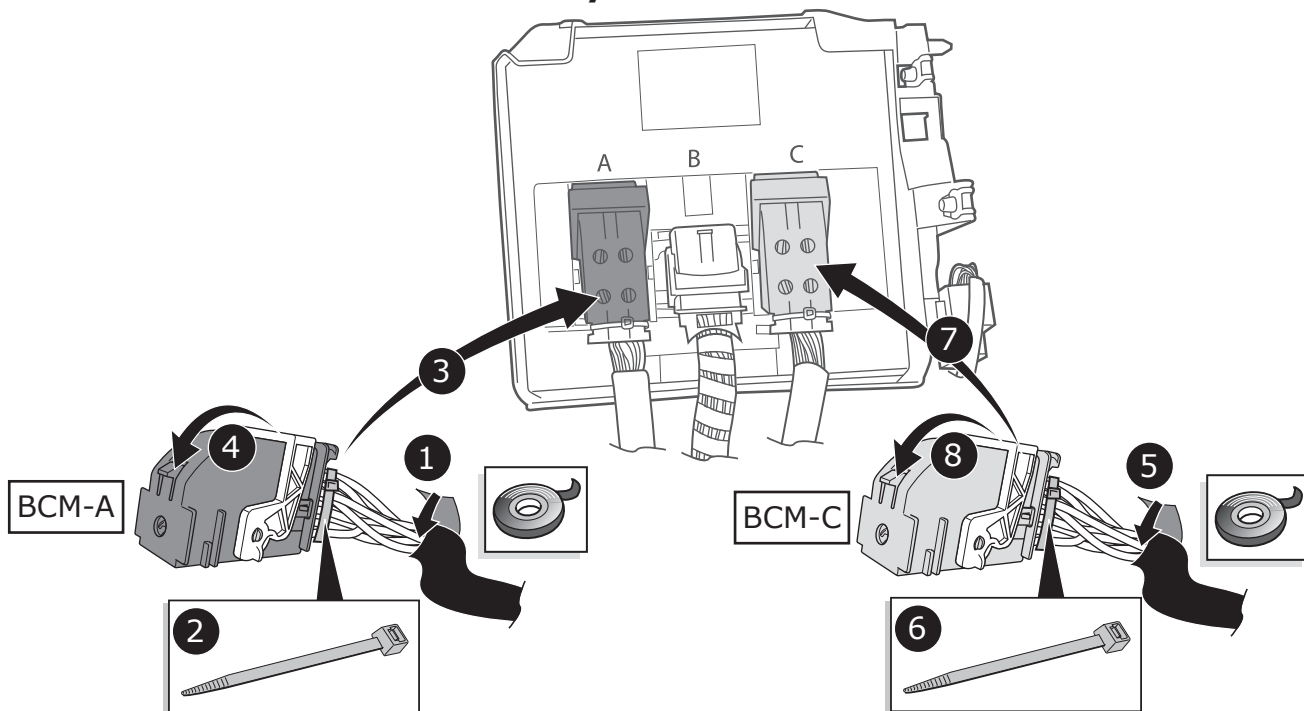

29




CANbus
OPTION B

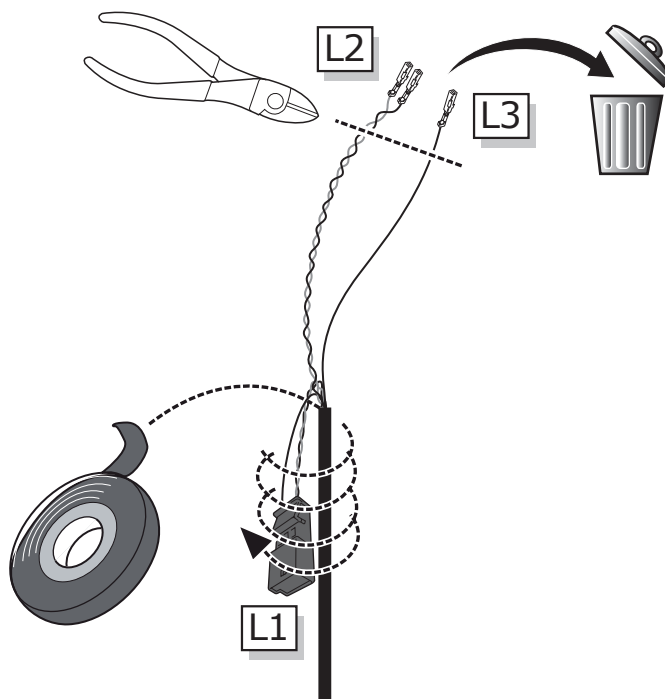

30

CANbus OPTION B


Body Control Module

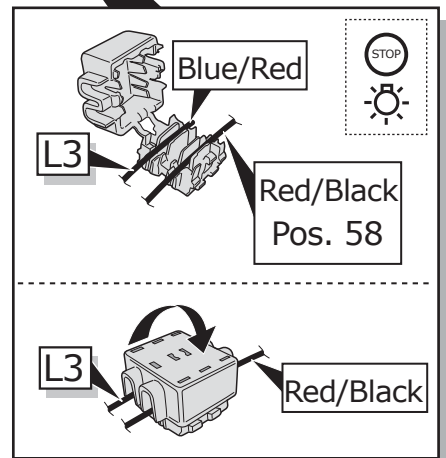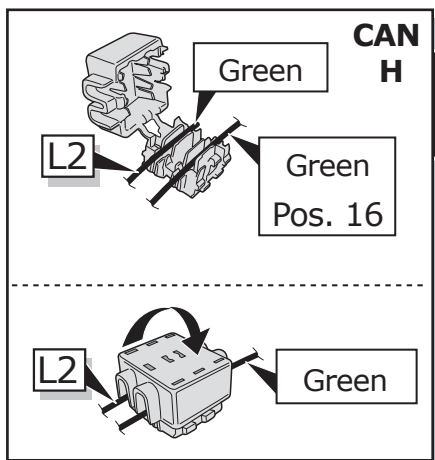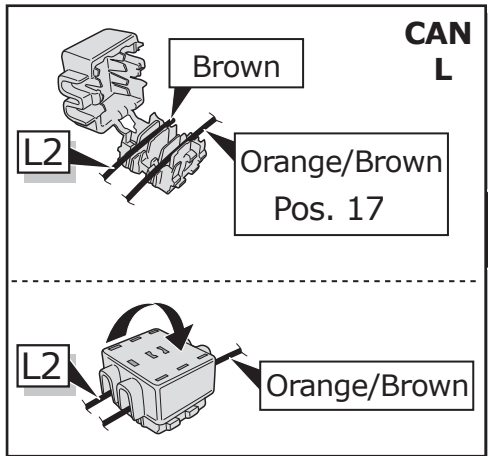

31



CANbus OPTION C

Body Control Module

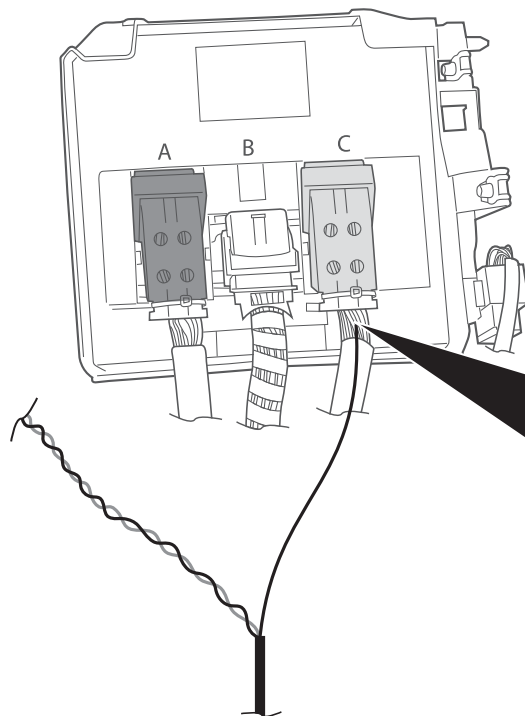


32

CANbus **OPTION C**

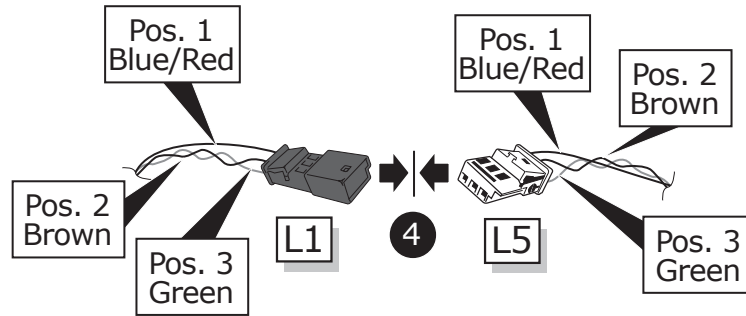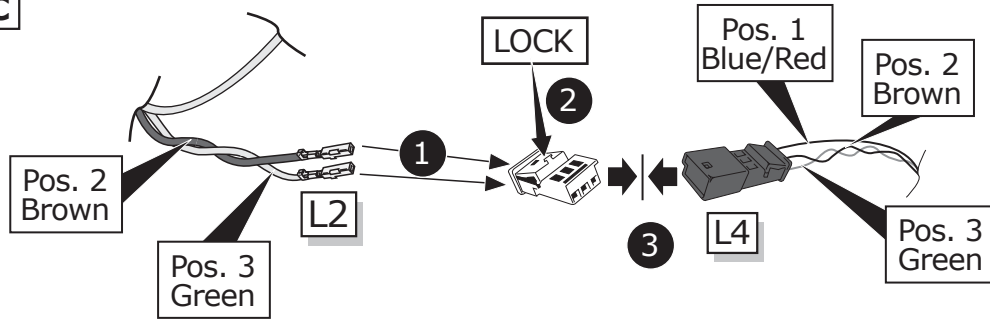



33

CANbus **OPTION C**

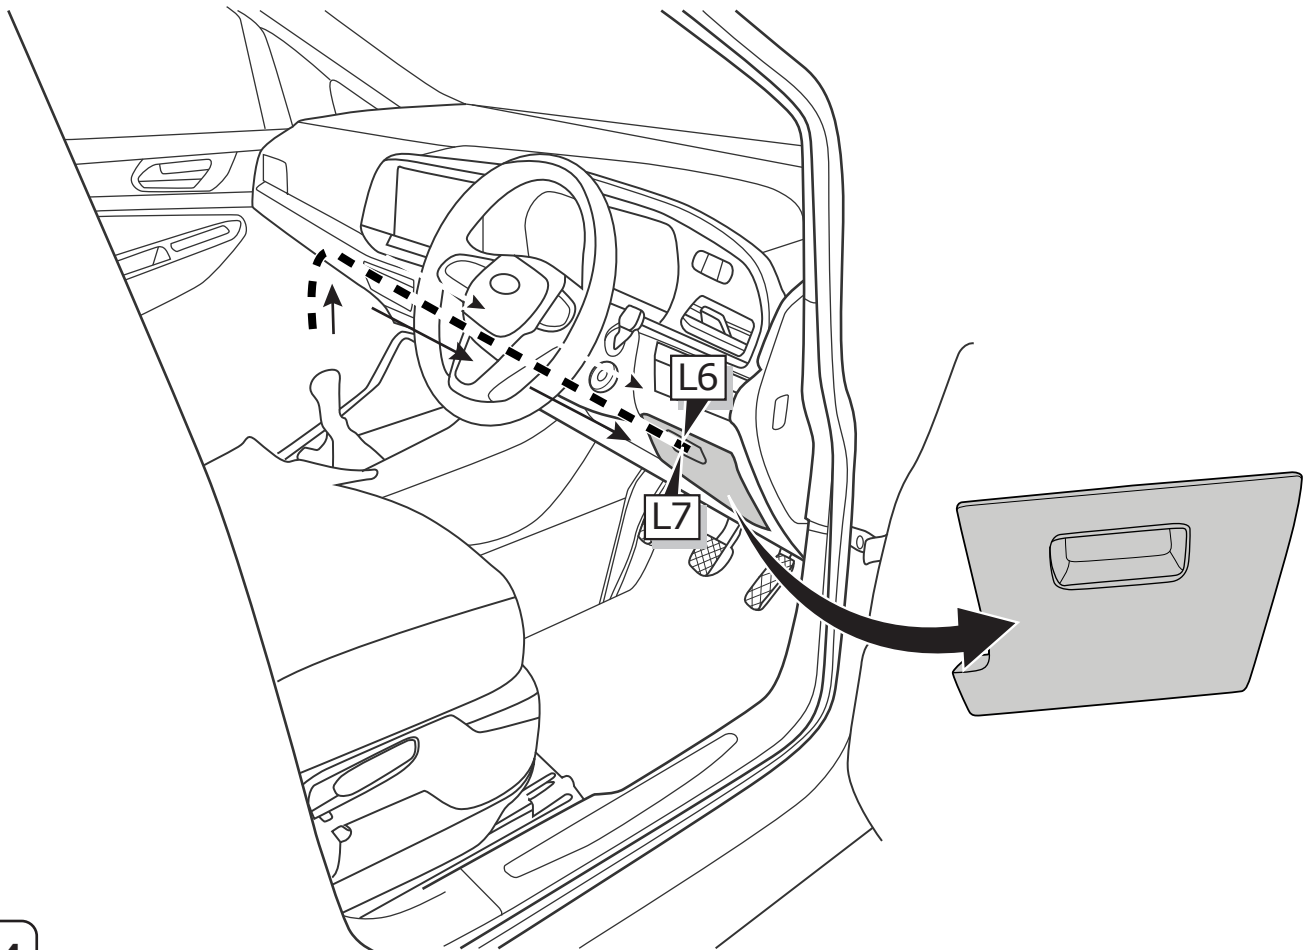


34


CANbus OPTION C

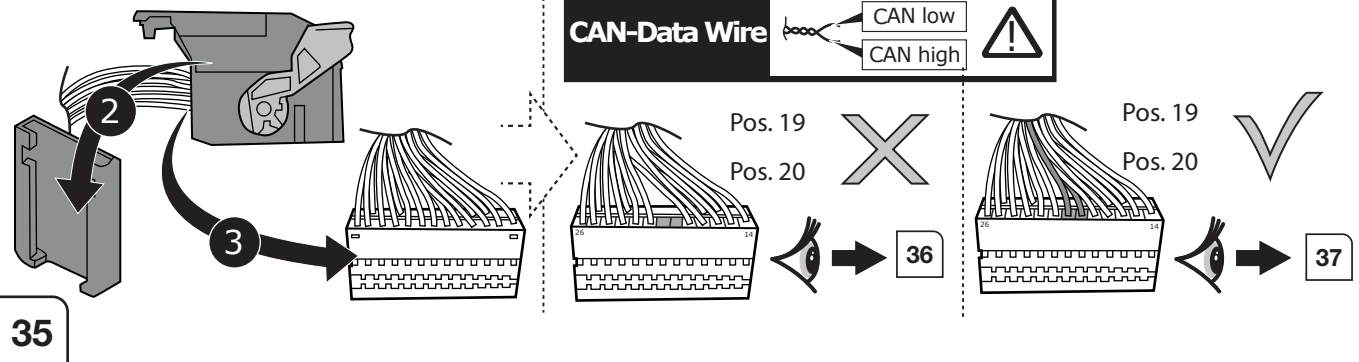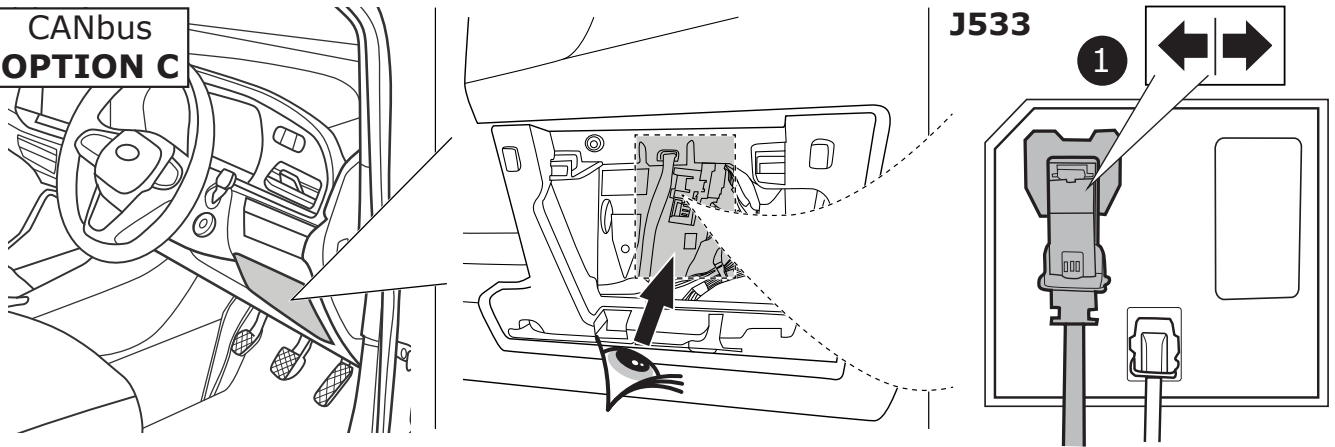


CANbus OPTION C

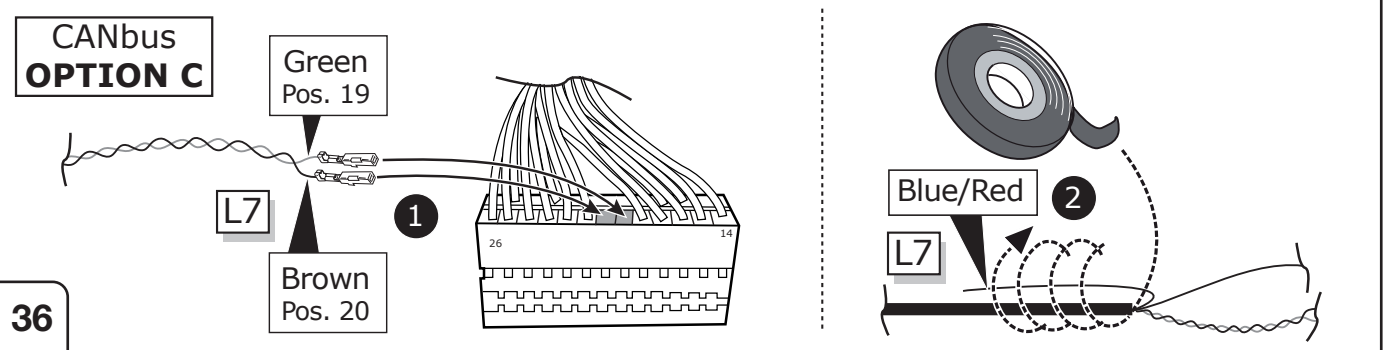


CANbus OPTION C

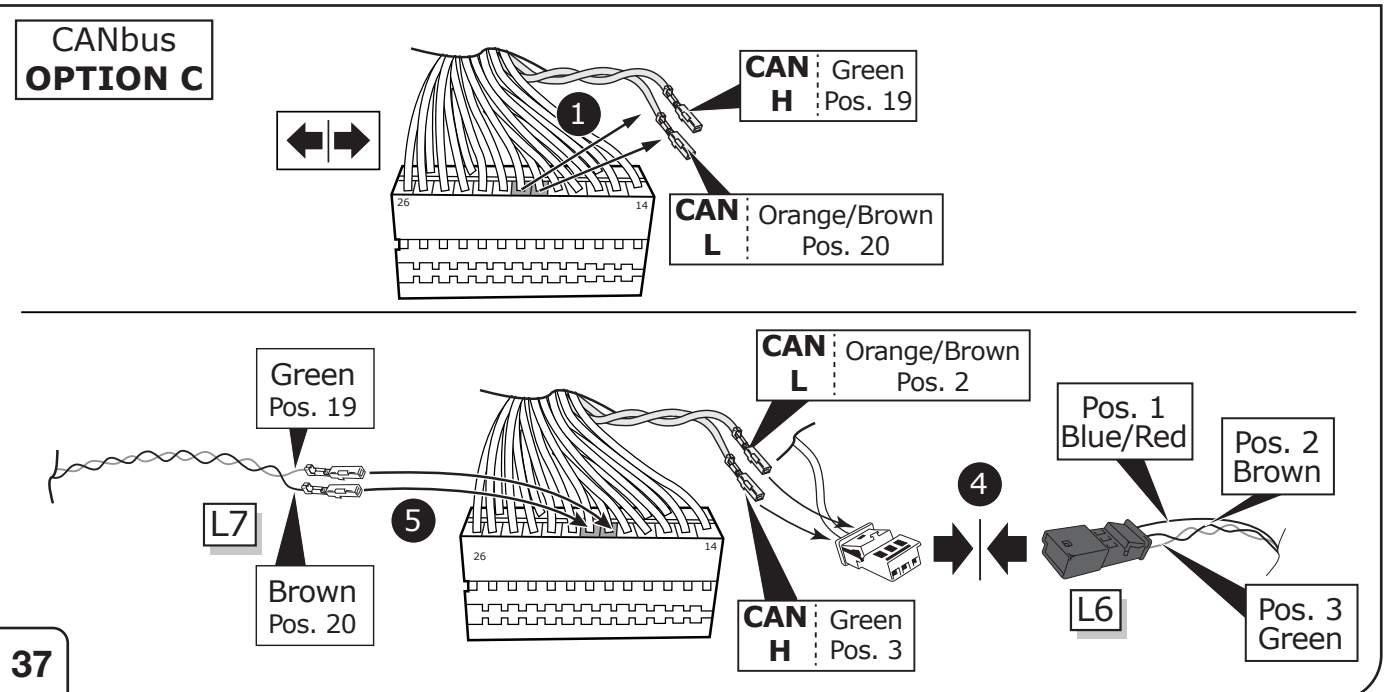

VW T7 Multivan

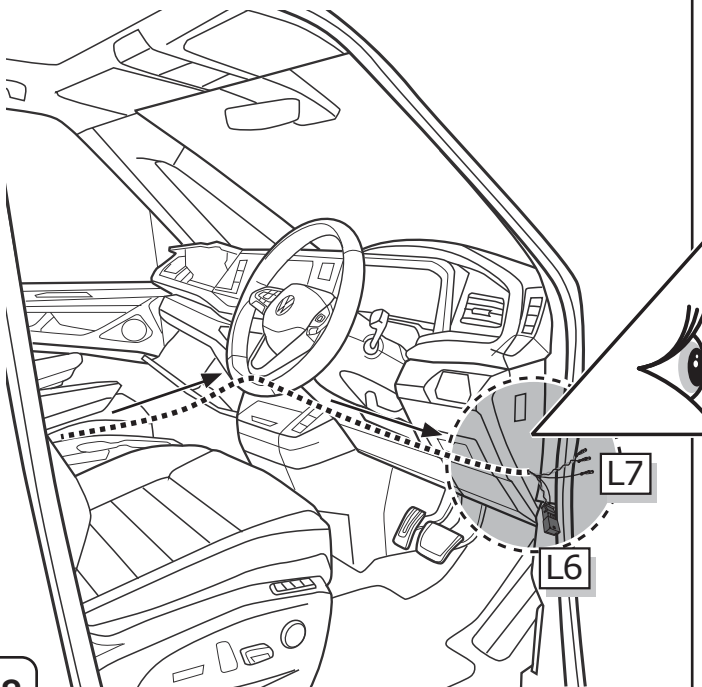


Body Control Module

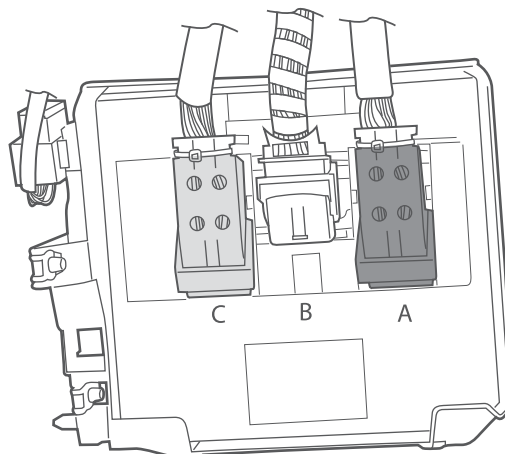


38

CANbus OPTION A




With
Avec
Mit




39

CANbus OPTION B



With
Avec
Mit

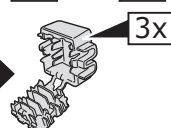

CANbus OPTION C




10th
S
Onwards

XXXXXXXXXX XXXXXXXXX

VW T7 Multivan

CANbus OPTION A


CANbus OPTION B

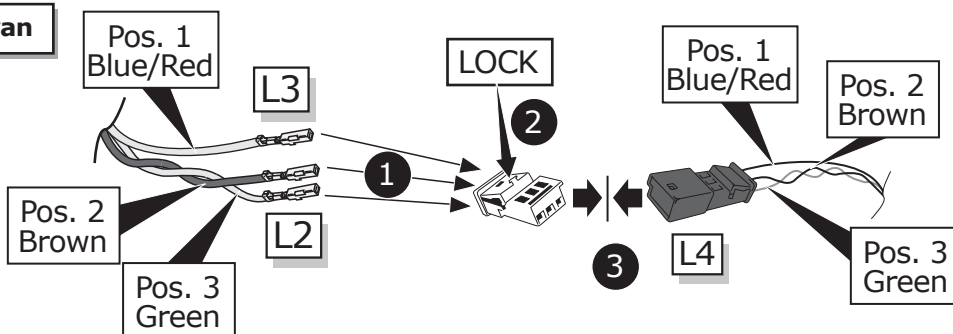

40

**CANbus
OPTION A**

Body Control Module




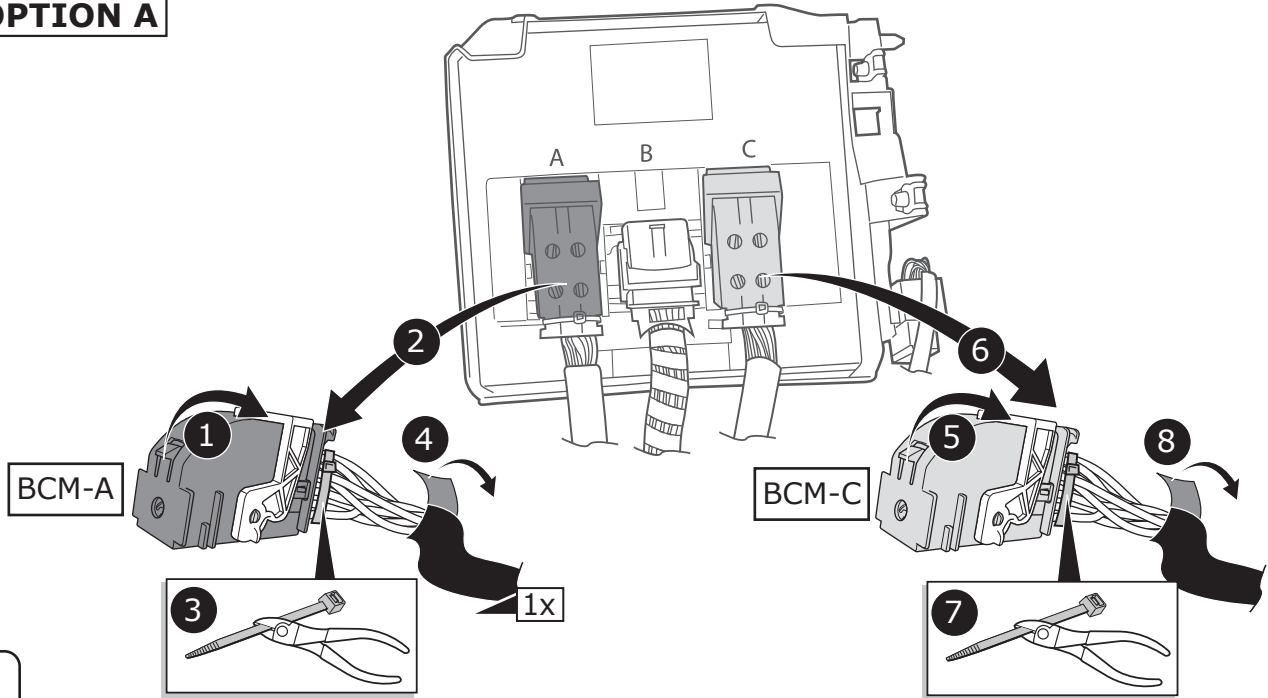


41


**CANbus
OPTION A**

BCM-A

2

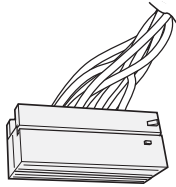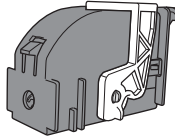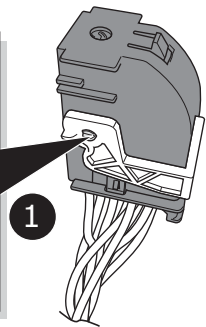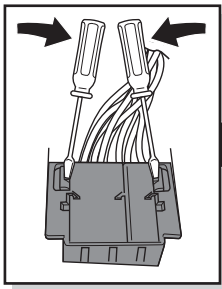


3

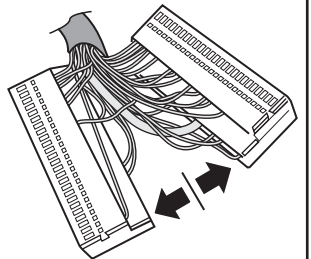

42

**CANbus
OPTION A**

BCM-A

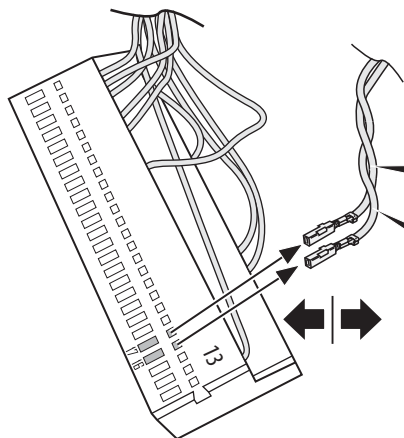

**CAN
L**

Orange/Brown
Pos. 17

**CAN
H**


Green
Pos. 16

Can-bus
Datawire

43

**CANbus
OPTION A**


BCM-A

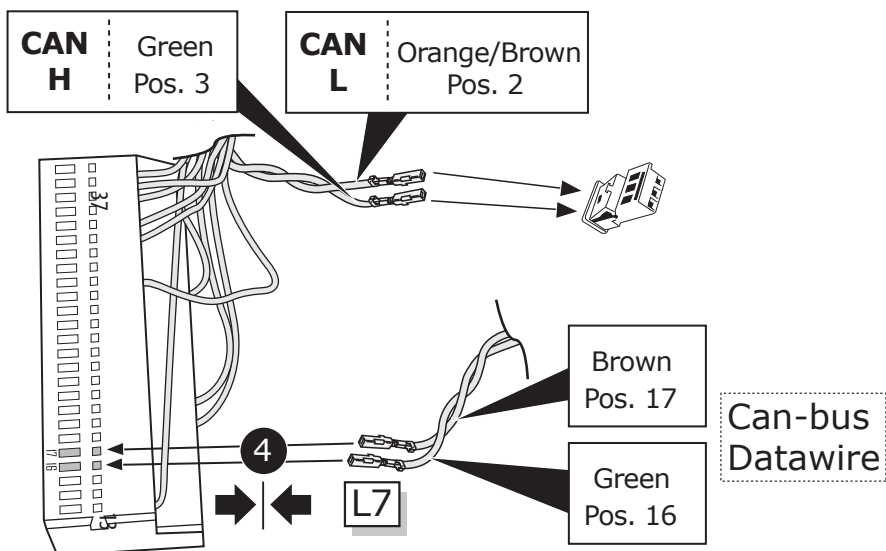

44

**CANbus
OPTION A**


BCM-A

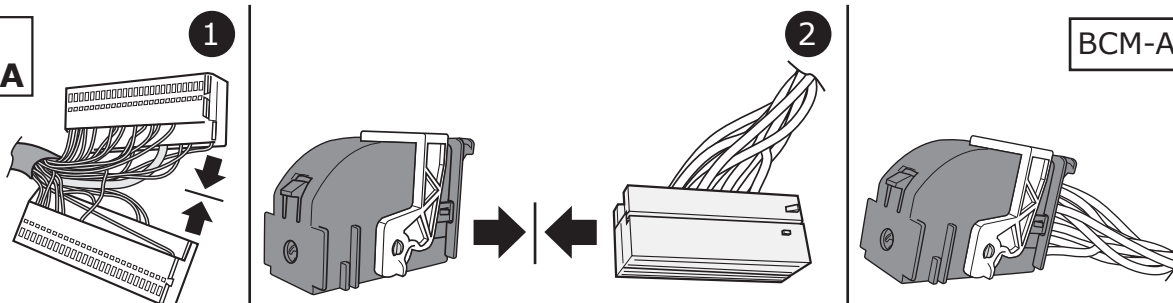

45

**CANbus
OPTION A**


BCM-C

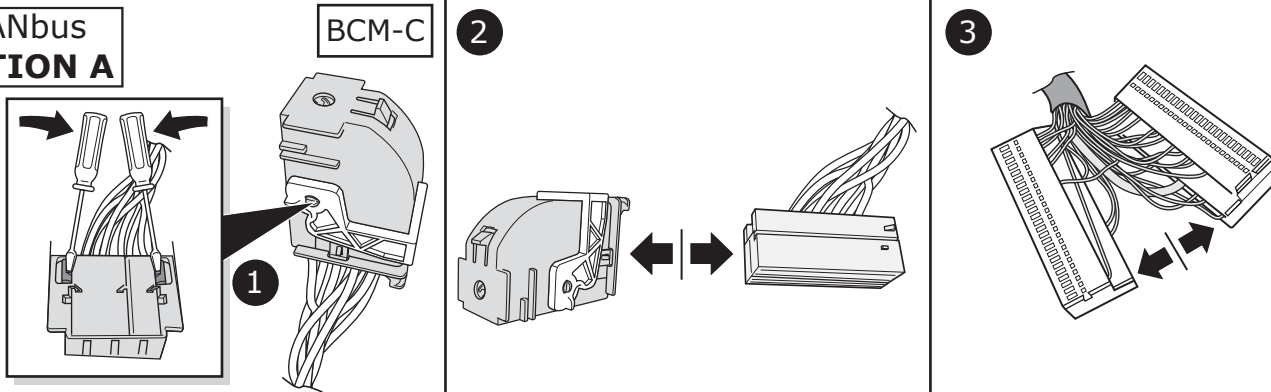

46


**CANbus
OPTION A**

BCM-C

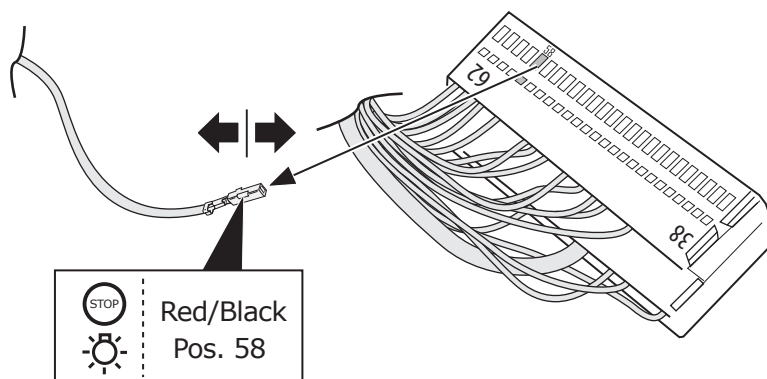


47

CANbus OPTION A

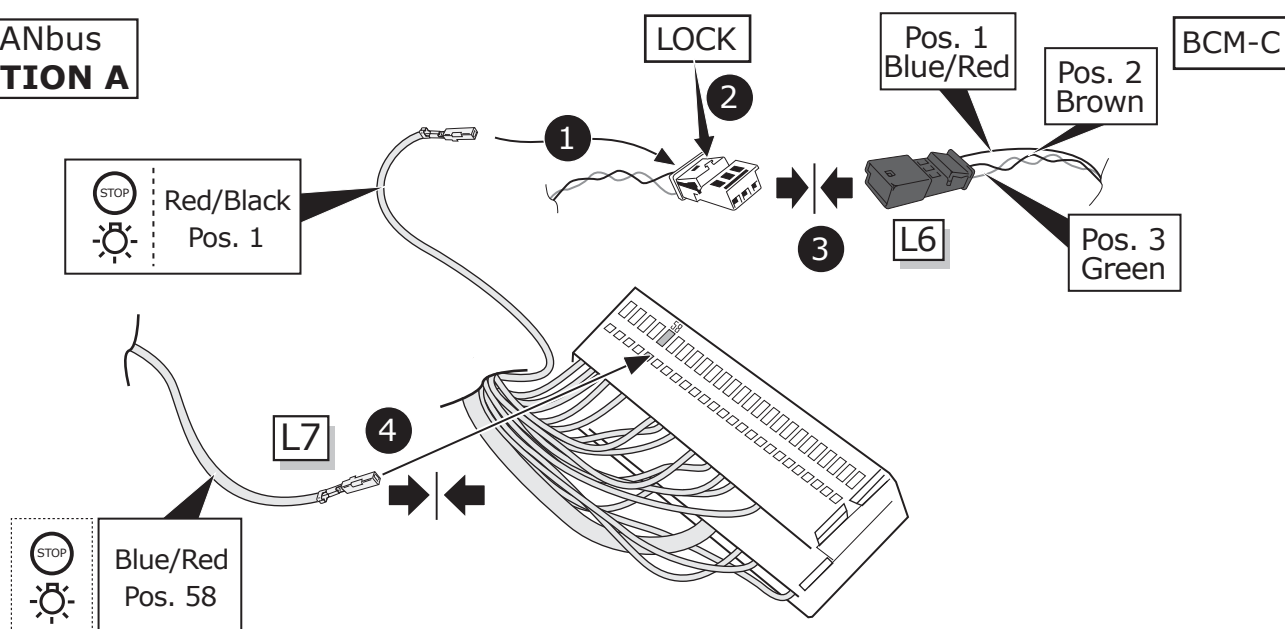

48


CANbus OPTION A

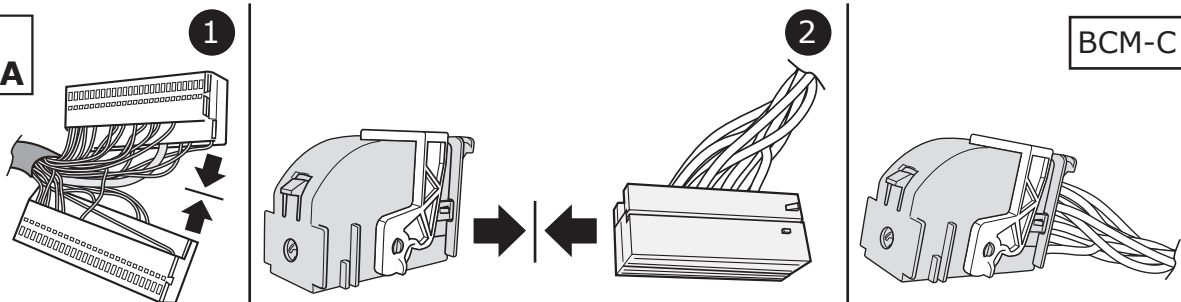

49


CANbus OPTION A

Body Control Module

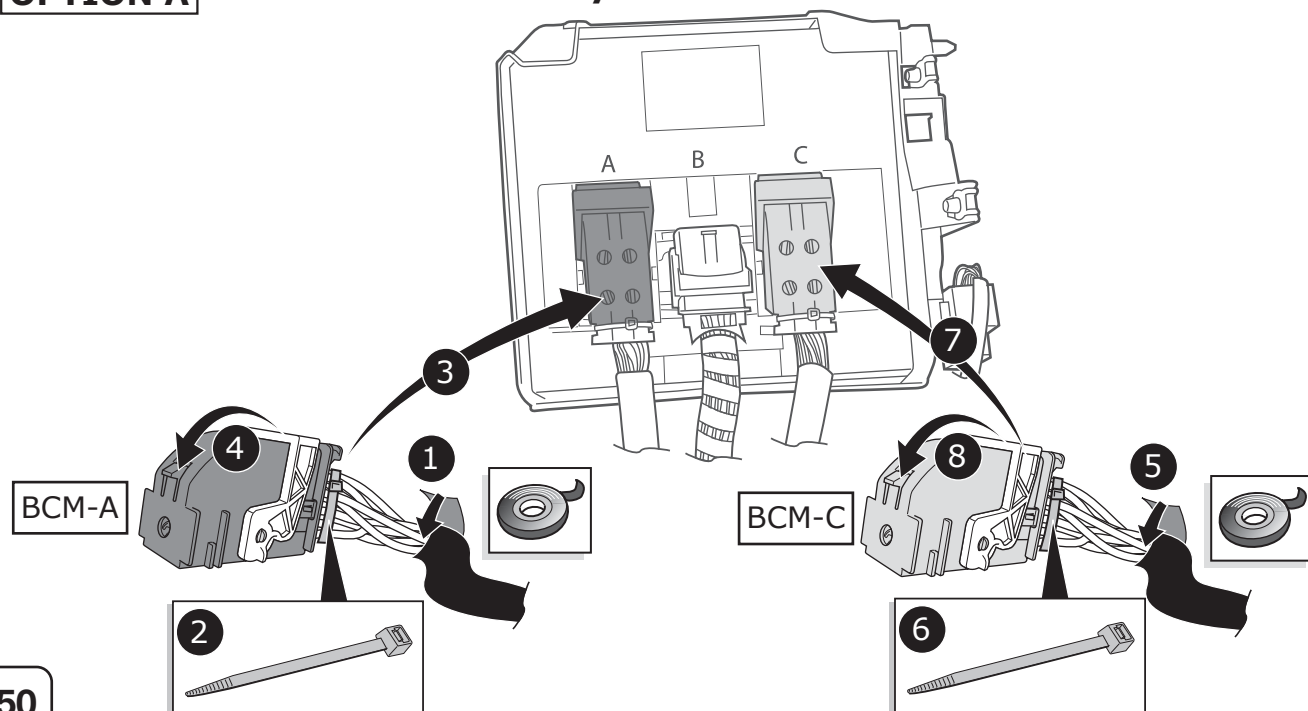

50





**CANbus
OPTION B**

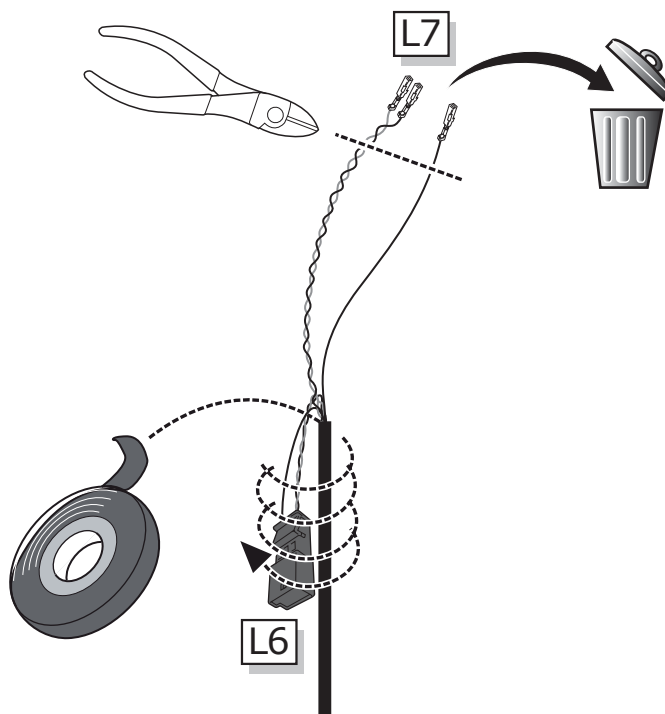

51

**CANbus
OPTION B**


Body Control Module

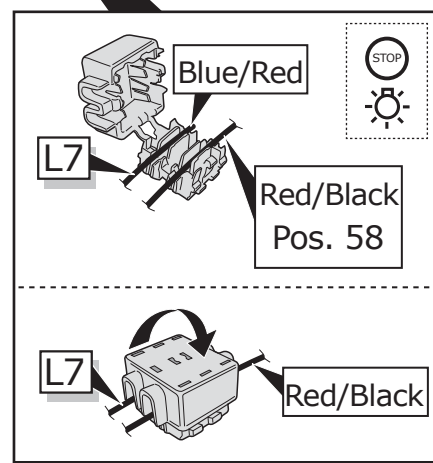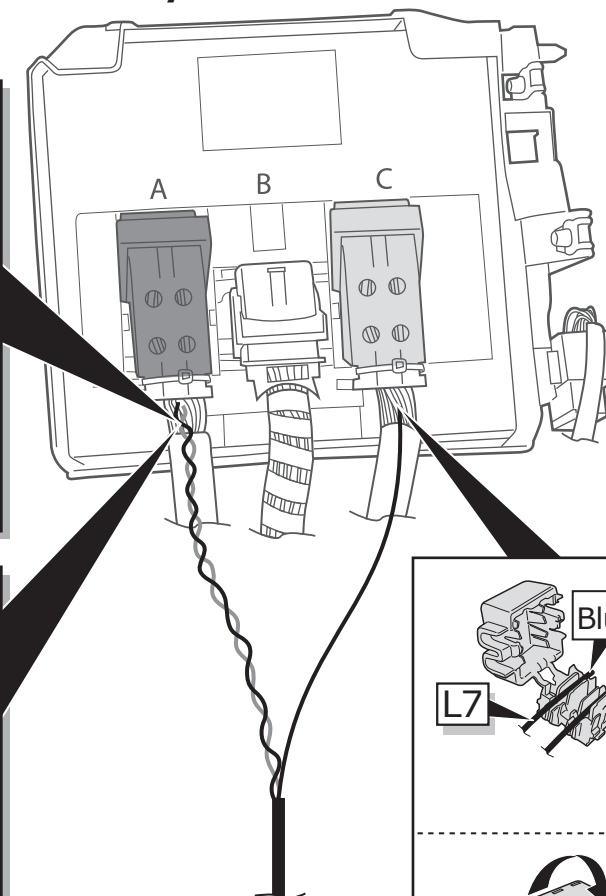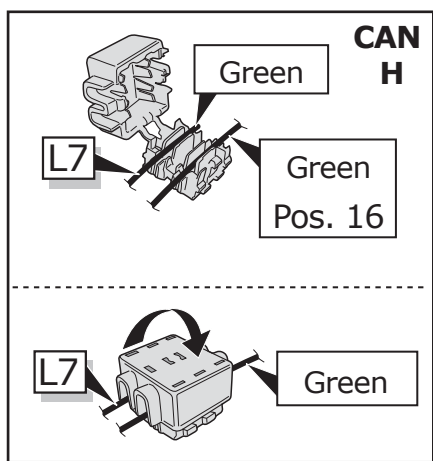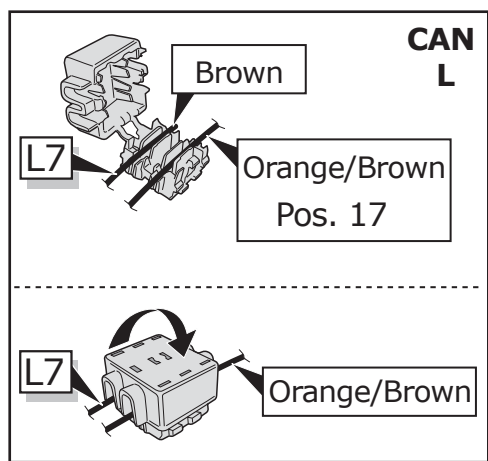

52


CANbus
OPTION C

Body Control Module

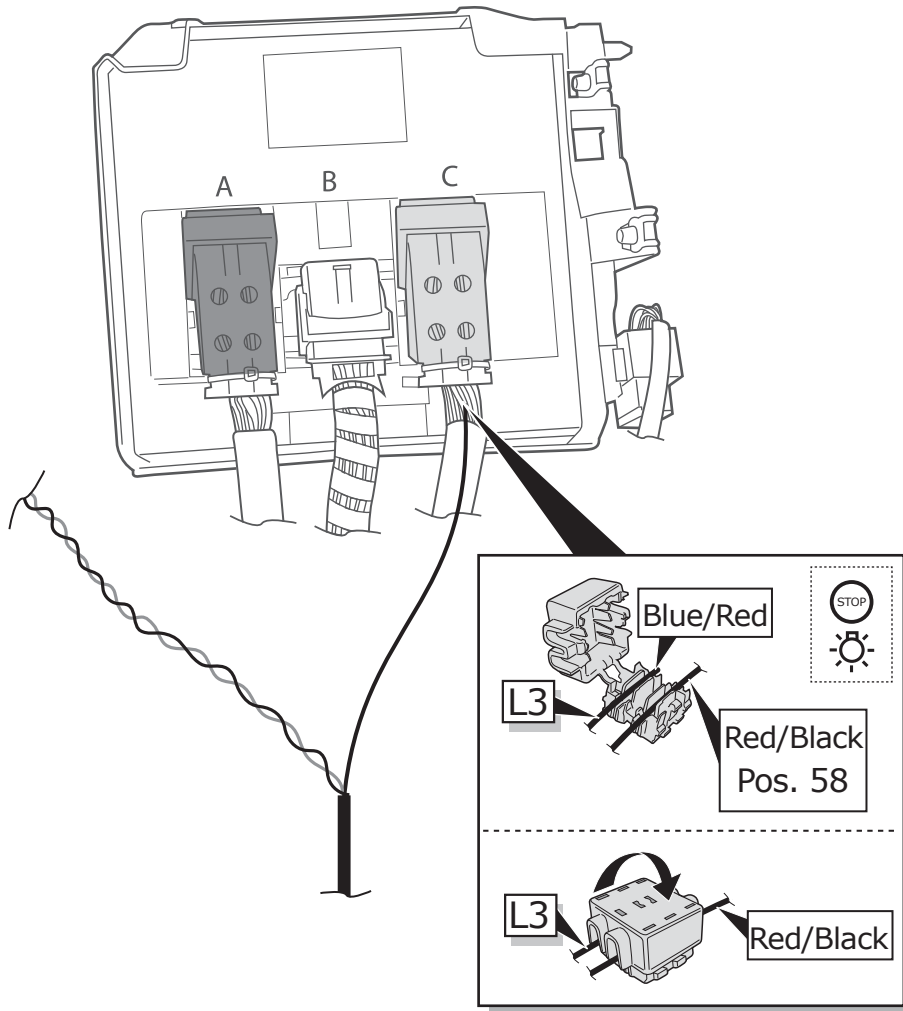

53



CANbus
OPTION C

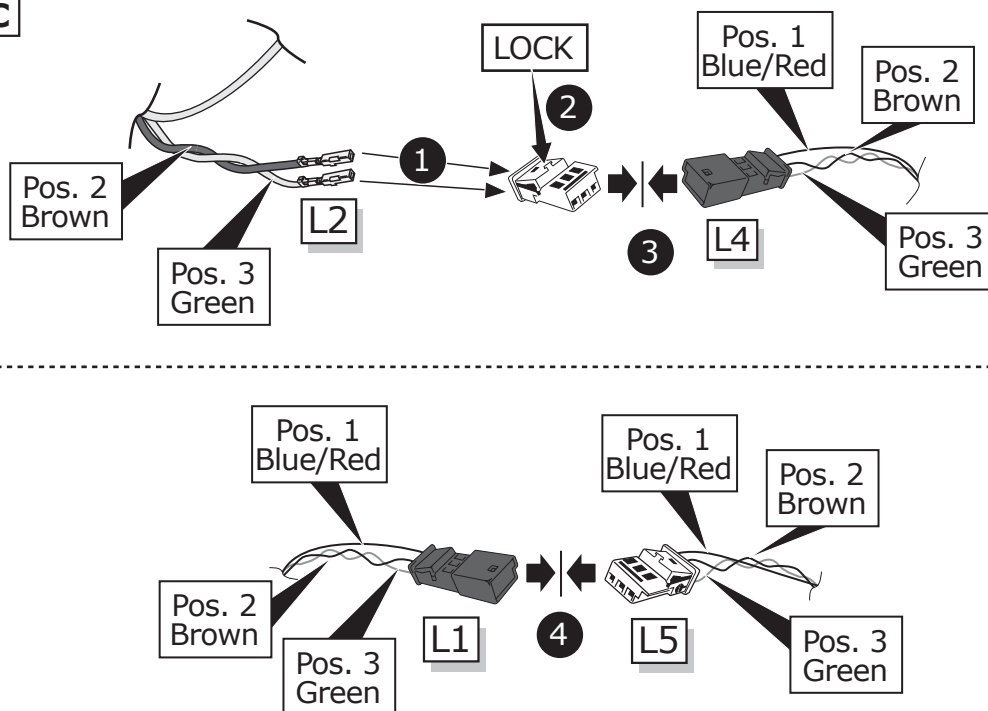

54

VW T7 Multivan



55

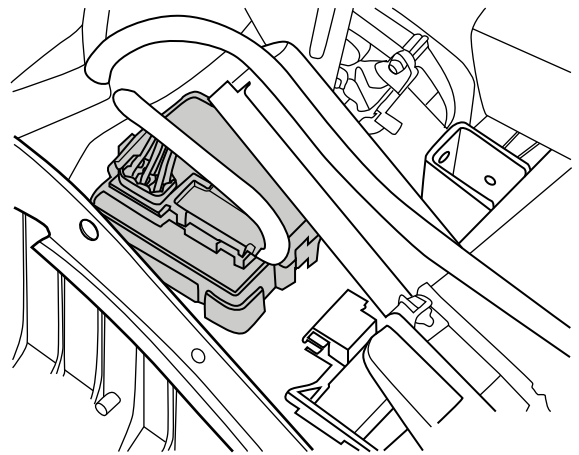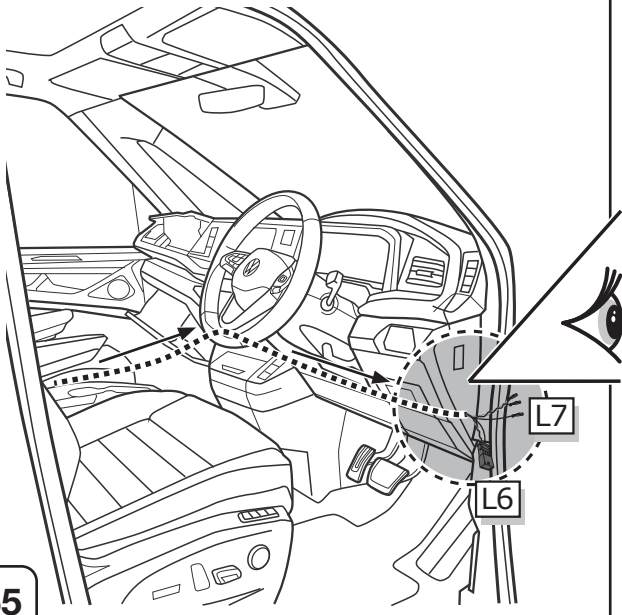

CANbus OPTION C

J533

1

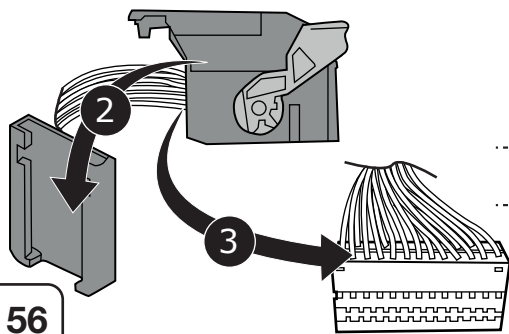

CAN-Data Wire

CAN low
CAN high



Pos. 19

Pos. 20



Pos. 19

Pos. 20



56

57

58


CANbus OPTION C

Green
Pos. 19


Brown
Pos. 20

L7



1

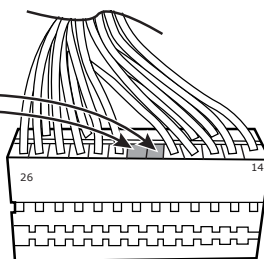

57

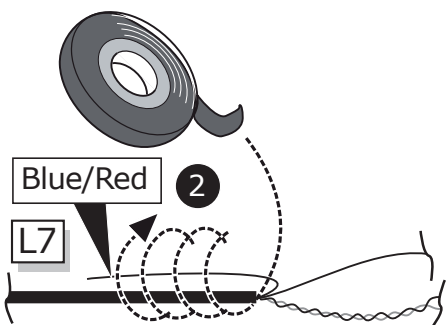


CANbus OPTION C

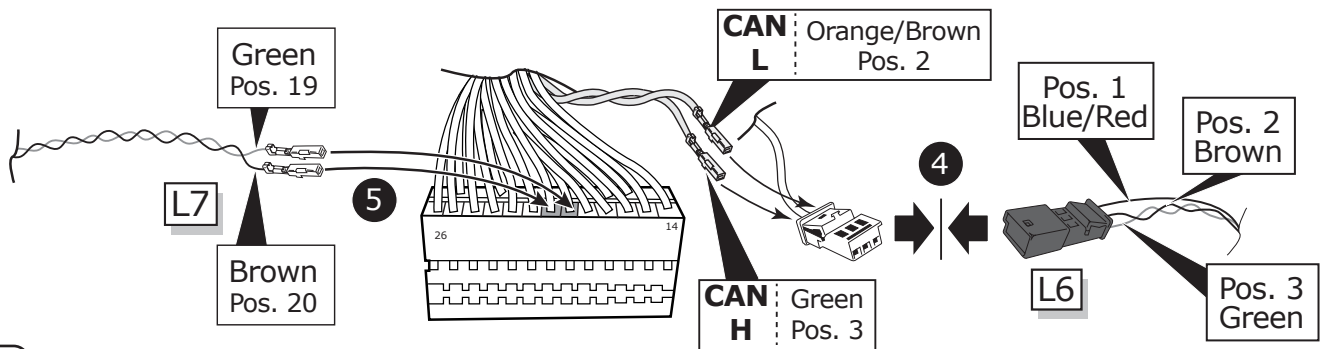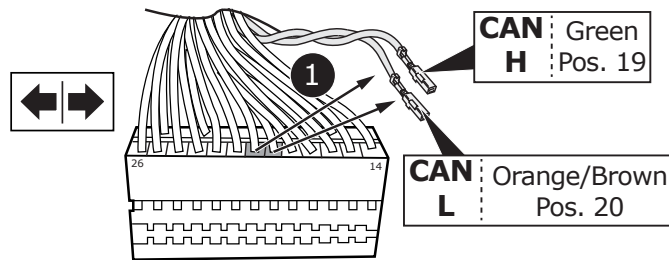

58


B+/30 OPTION A

Only B+/30 for module needed!

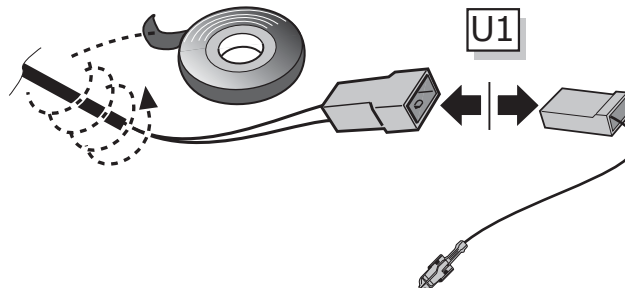


1


2

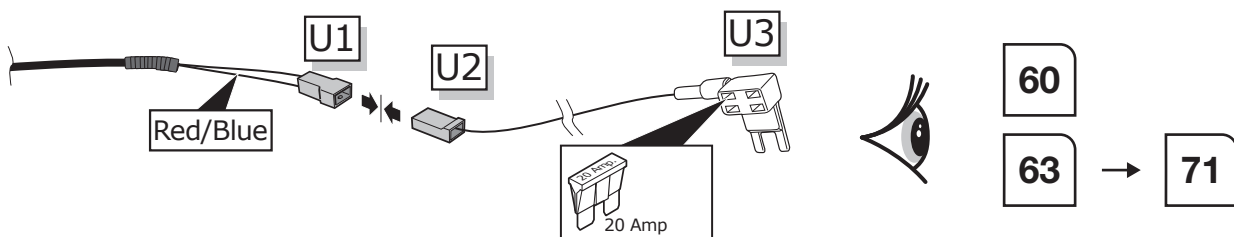


59

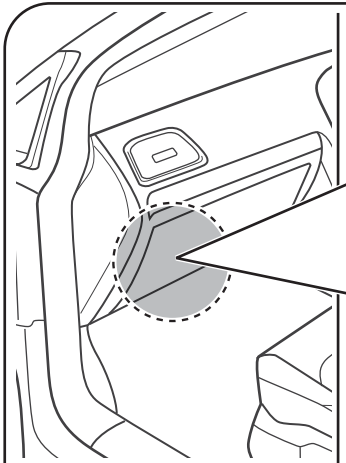

B+/30 OPTION A

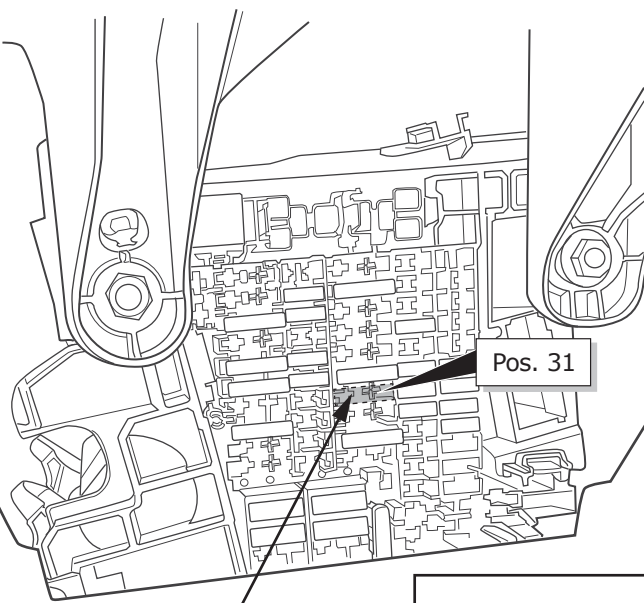


Pos. 31

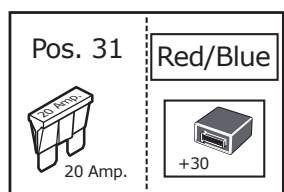


U1

U3

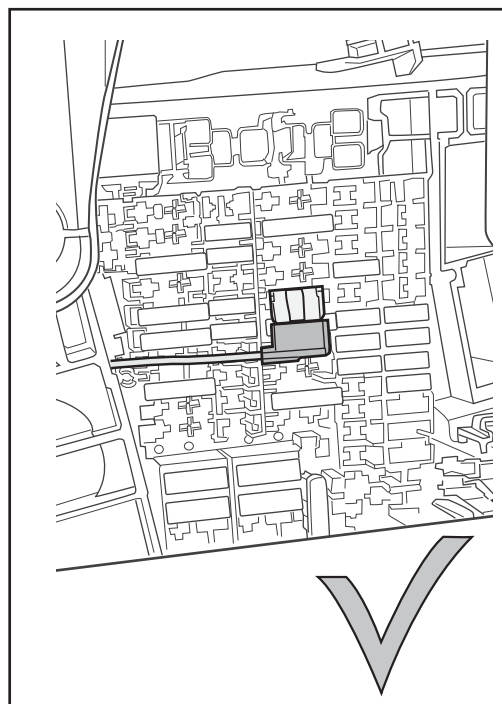


60

B+/30 OPTION B


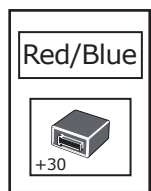


U1


61

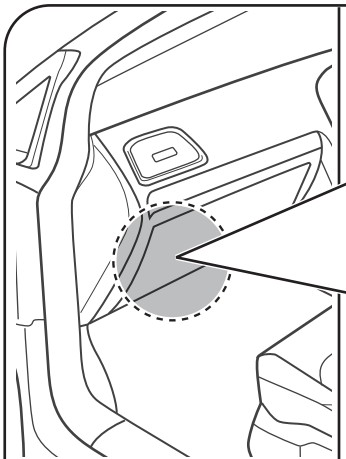

B+/30 OPTION B

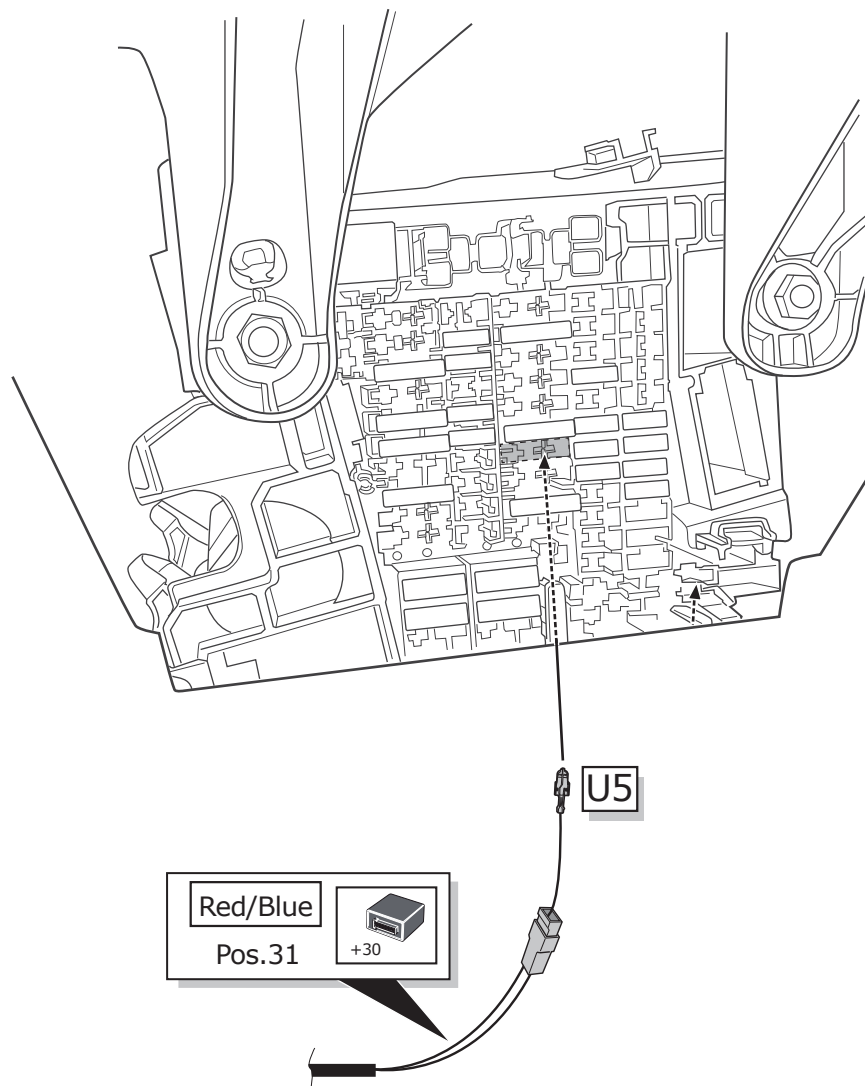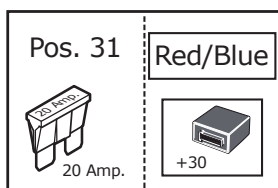

62

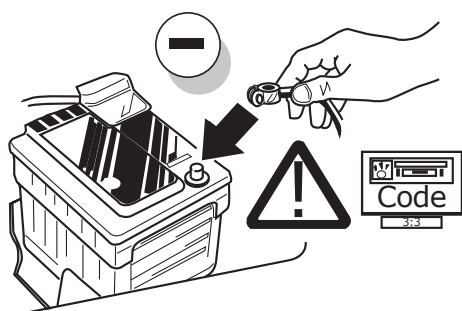


63



64




Optional

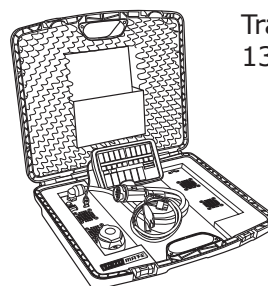




Trailer Simulator for 7- and 13-pin Sockets

65

Functional test

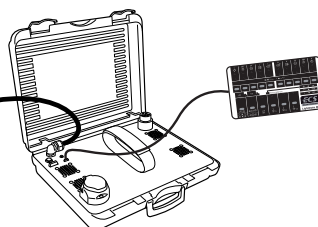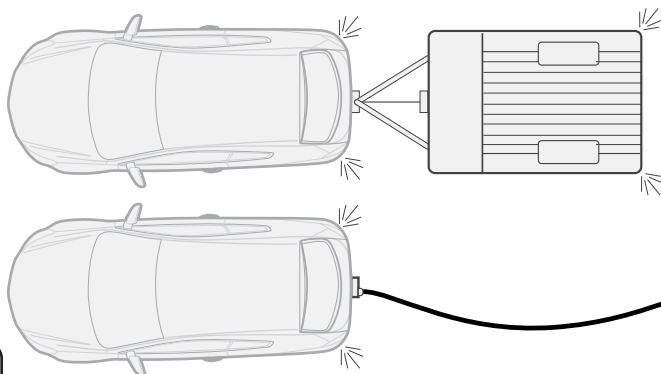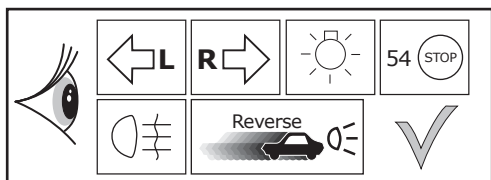

66

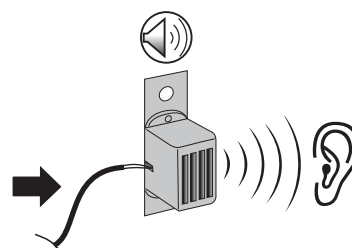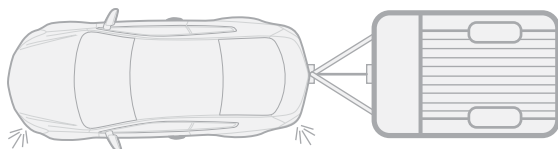



67



Rear fog light cut-off is not supported!

PDC to be deactivated manually!

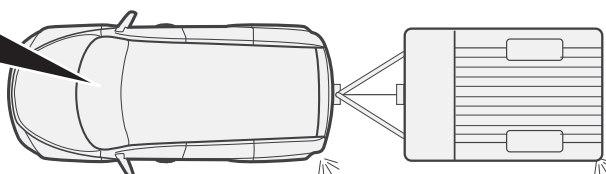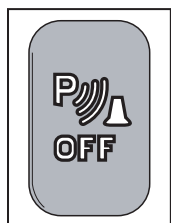

68

The following light functions for the trailer are not **supported** by all towing vehicles **with DRL circuit**:

- **Rear lights**
- **Side lights**
- **Numberplate lights**

The **taillights or dimmed headlights** **must be switched** on to activate this function!



INFO

Optional


Adapter socket



69

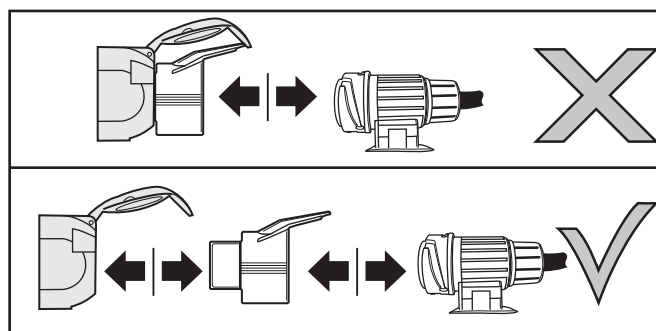
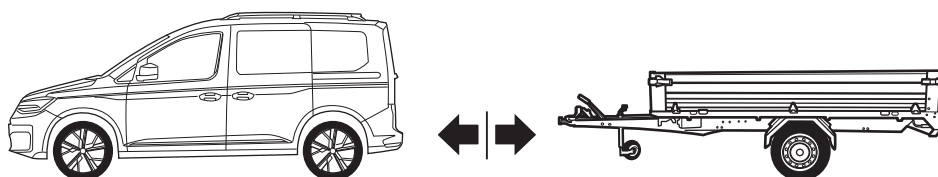


70

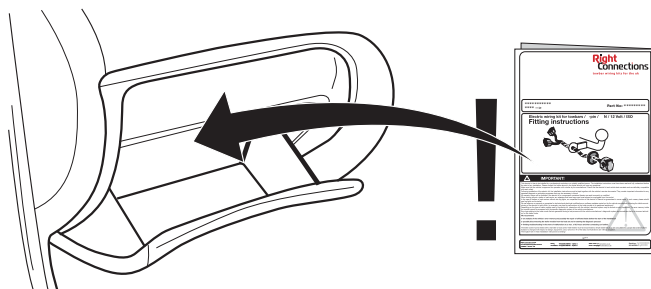

71

SOCKET CONNECTION

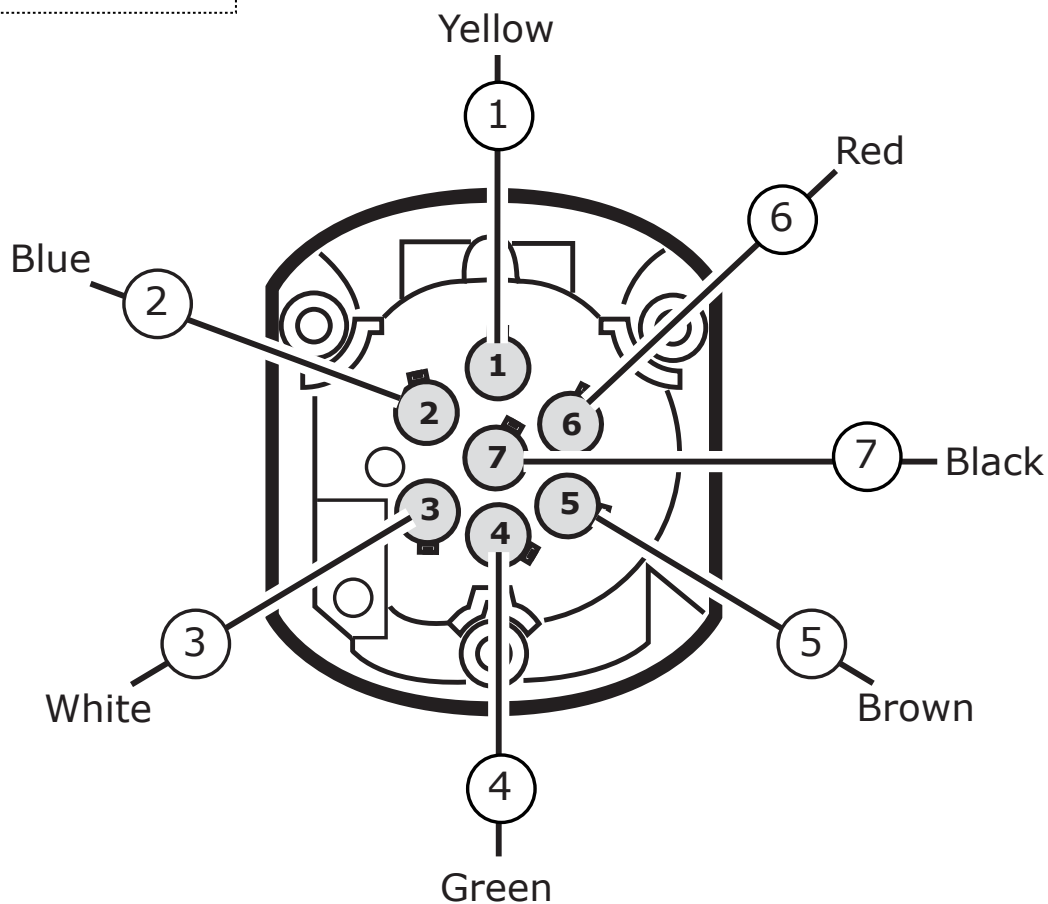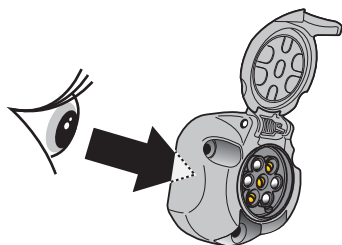

SOCKET CONNECTION

DIN/ISO 1724	← L	⊕	⏚ 1-7	R →	☀	⊞	☀
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L
Pmax	21W	21W		21W	42W	3x21W	42W
Colour	Yellow	Blue	White	Green	Brown	Red	Black